

USER MANUAL

5KW/6.2KW

Important Instructions

The instructions contain all the safety alerts, installation instructions, and operation instructions of the 5kW/6.2kW Inverter. Please read the instructions carefully before installation and use, and properly keep it for future reference.

- There is an unsafe voltage in the device. Do not disassemble the device by yourself in case of electric shock. Please contact the local qualified service center for repair.
- The mains input and AC output are of high voltage. Please do not touch the wire connection.
- In order to reduce the risk of electric shock, please disconnect all wires before maintenance.
- Do not open the terminal cover when the device is under operation to prevent the electric shock.
- The device shall be installed by qualified professionals.
- Do not place or install the inverter in a place accessible to children.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- Do not touch the hot shell when the device is under operation.
- It is recommended to install a proper fuse or circuit breaker outside the inverter.
- Disconnect the fuse or circuit breaker near the Photovoltaic (PV) array, mains, and battery terminals with insulating gloves, before installation and adjustment of the wiring of the inverter.
- After installation, please check whether all wires are tightly connected in case of fire hazards due to heat accumulation generated by loose connections.
- The inverter is an off-grid device. Please ensure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage to the inverter and electrical appliance.
- In order to reduce the risk of injury, only deep-cycle rechargeable batteries can be used if using lead-acid battery.
- During normal use, please clean the dust filter of the machine every two months. The operation needs to be carried out after power off.
- The device is for indoor use only and must not be installed outdoors.

Table of Contents

Important Instructions	1
1. Basic Information	3
1.1 Product Overview and Features	3
1.2 Introduction to the Basic System	3
1.3 Product Appearance	4
1.4 Dimensional Drawing	5
2. Installation Instructions	6
2.1 Installation Precautions	6
2.2 Wiring Specifications and Circuit Breaker Selection	7
2.3 Installation and Wiring	8
2.4 Parallel Connection and Wiring	15
3. Working Modes	24
3.1 Power Supply Modes	24
3.2 Charging Modes	26
3.3 Battery Charging Parameters	27
4. Operating Instructions for LCD Screen	29
4.1 Operation and Display Panel	29
4.2 System Time Setting	33
4.3 Equipment Information Interface	34
4.4 Fault Alarm Interface	34
4.5 PV Parameter Display Page Introduction	35
4.6 Grid Parameter Display Page Introduction	36
4.7 Load Parameter Display Page Introduction	37
4.8 Battery Parameter Display Page Introduction	38
4.9 Generator Information Interface	40
4.10 System Parameter Settings Page	40
5. Other Functions	55
5.1 RS485 Communication Function	55
5.2 USB Port Function	55
5.3 Dry Contact Function	56
5.4 Wi-Fi Wireless Communication Function	57
6. APP Instructions	57
7. Protection	58
7.1 Error Code	58
7.2 Troubleshooting (partial)	59
8. System Maintenance	61
9. Technical Parameters	61

1. Basic Information

1.1 Product Overview and Features

This device is a new solar energy storage inverter integrating solar energy storage, grid charging & storage, and AC sine wave output. Controlled by the digital signal processor (DSP), the inverter has high response speed, high reliability, high standards, and other features. Its charging and AC output modes are optional to meet the characteristics of different application scenarios.


Features:

- Simplified charging modes: solar energy charging only/solar energy charging priority charging. Each mode maximizes the use of solar energy.
- An uninterruptible power supply (UPS) function with three types of AC outputs such as grid bypass, inverter output, and power supply.
- Up to 140A maximum current for long-time discharging.
- Long-term 6.2kW discharging at full power output without derating.
- Supports both lead-acid batteries and lithium batteries.
- Up to 40A PV input current.
- Independent input port for the diesel generator.
- USB disk upgrade and online upgrade.
- Dual outputs for smart load management.


1.2 Introduction to the Basic System

The basic application of the inverter is shown in the following figure. The complete operating system includes:

- Generator or grid
- PV module
- Battery
- Domestic load
- Energy storage inverter

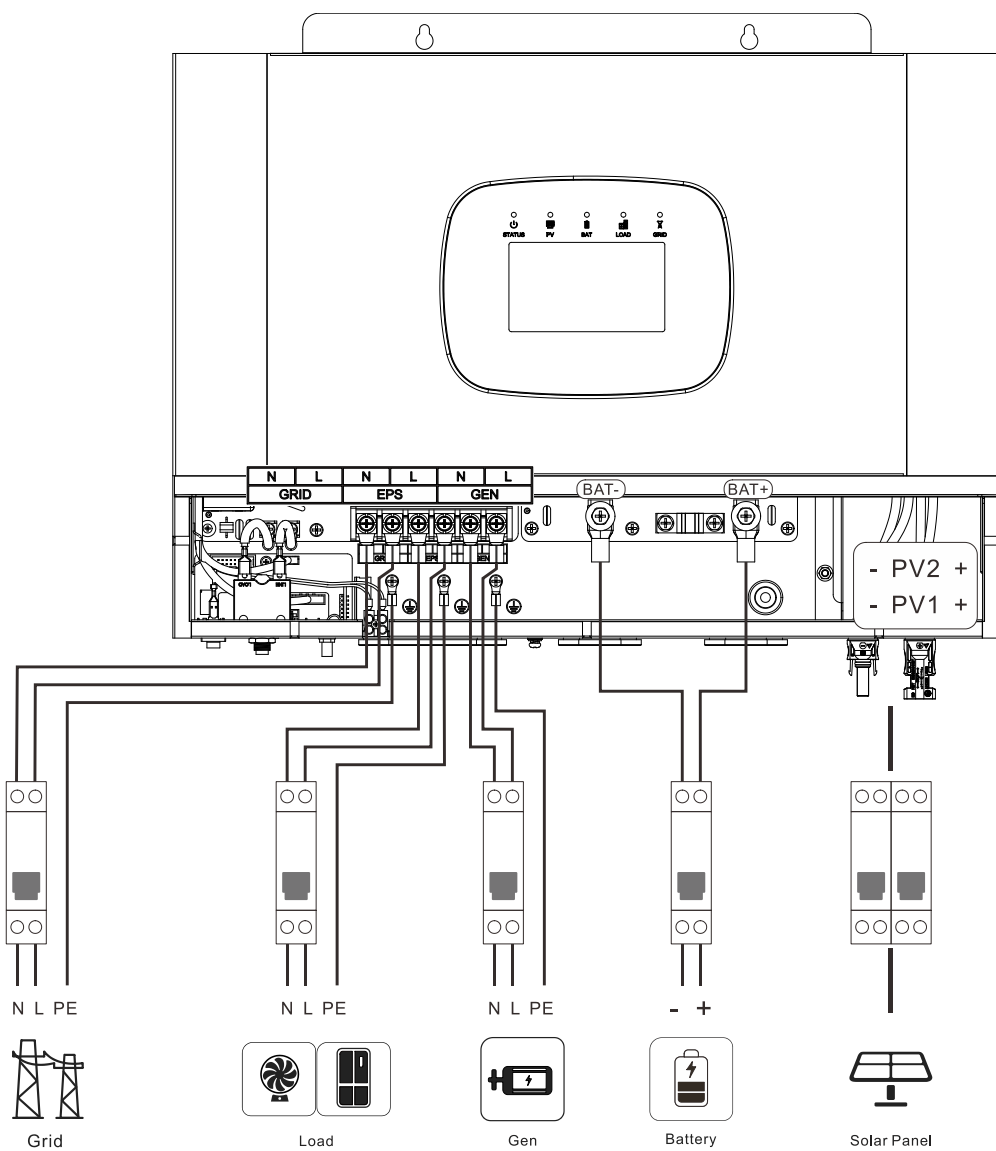


1.3 Product Appearance

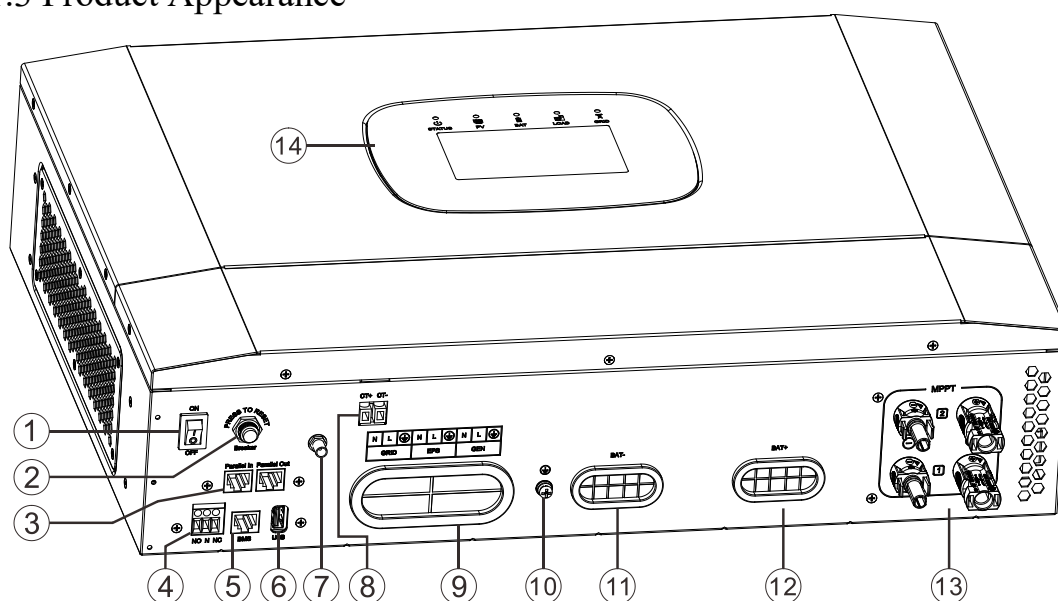

①	ON/OFF rocker switch	⑨	AC input port
②	Overload protector for AC input		AC output port
③	Parallel communication port		Input port for diesel generator
④	Dry contact port	⑩	Ground screw hole
⑤	BMS communication port	⑪	BAT-
⑥	USB communication port	⑫	BAT+
⑦	External antenna port	⑬	PV input port
⑧	CT contact port(Ratio 2000:1)	⑭	LCD display screen

1.4 Dimensional Drawing

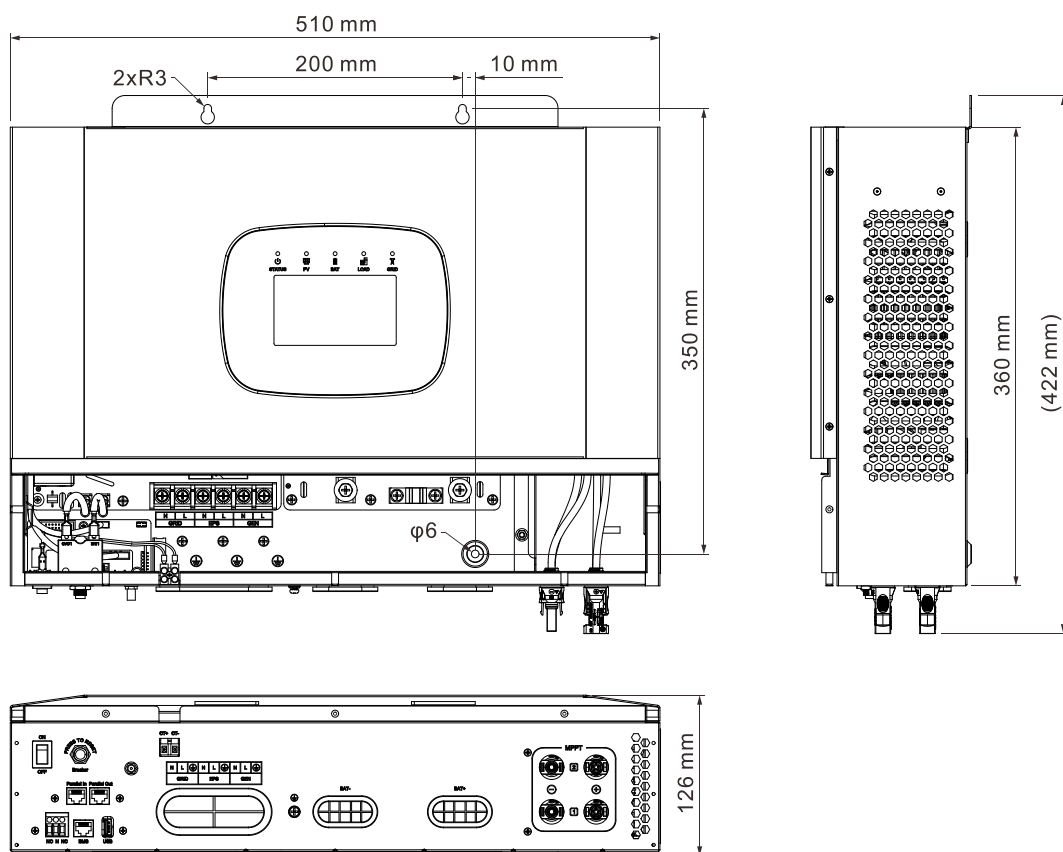







2. Installation Instructions

2.1 Installation Precautions

Before installation, please carefully read this manual to understand the procedures and get familiarized with the precautions.

- Be careful when installing the battery. Please wear protective goggles when installing the lead-acid liquid battery, and rinse with clean water promptly in case of any contact with battery acid.
- Keep the battery away from metal objects in case of short circuits.
- Make sure the environment is well-ventilated because acid gas may be generated when the battery is charged.
- Leave enough space around the inverter for heat dissipation. Do not install the inverter and the lead-acid liquid battery in the same cabinet in case that acid gas generated by the battery corrodes the inverter.
- Only charge the battery compatible with the inverter.
- Loose connectors and corroded wires may cause great heat and melt the wire insulation layer, burn the surrounding materials, and even cause a fire, so please make sure that the connectors are tightened and the wires are preferably fixed with cable ties in case of loose connectors caused by the wobbling wires during movement.
- Select connecting wires with a current density less than $5\text{A}/\text{mm}^2$ for the system.
- Avoid direct sunlight and rainwater in outdoor installation.
- After the power switch is turned off, a high voltage is still inside the inverter. Do not open or touch the internal components until the capacitor completely discharges.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- It is forbidden to reversely connect the input ends of the battery. Otherwise, it may lead to the damage of the device or unpredictable risks.
- The grid input and AC output are of high voltage. Please do not touch the wire connection.
- Do not touch the operating fan in case of injury.

- Make sure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage.
- Please check the machine before installation to make sure there is no damage in the packaging. You should receive the following items in your package

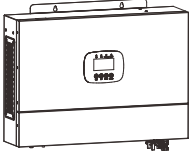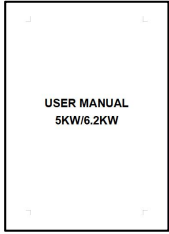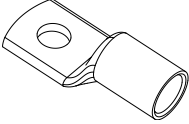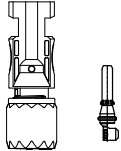	Inverter (*1)		User manual (*1)
	Network cable (*1)		Terminal SC35-6 (*2)
	OT terminal RNB14-5 (*6)		Terminal RNB5-4 (*4)
	Self-tapping screw ST4.2 (*3)		External antenna(*1)
	Positive PV Plugs(*2)		Negative PV Plugs(*2)
	PV terminal disassembly tool (*1)	/	/

2.2 Wiring Specifications and Circuit Breaker Selection

The wiring and installation must comply with requirements of the national and local electrical codes. The wiring specifications and circuit breakers are recommended as follows:

- Specifications of the AC input and output wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of AC input/output	Maximum working current	Recommended model of the air switch or circuit breaker
6.2kW	6-10mm ² /8-10AWG	40A	2P-50A

- Specifications of the PV input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of PV input	Single-path maximum operating current	Recommended model of the air switch or circuit breaker
6.2kW	6-10mm ² /8-10AWG	40A	2P-50A

- Specifications of the battery input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of BAT input	Recommended O-type terminal	Maximum working current	Recommended model of the air switch or circuit breaker
6.2kW	42mm ² *2/1AWG*2	SC35-6	140A	2P-180A

- Specification of the shell earth wire is as follows:

Device Model	Recommended size of the earth wire
6.2kW	4-6mm ² /10-12AWG

Notes:

- The wire diameters are for reference only. If the distance between the PV array and the device or between the device and the battery is long, the thicker wire can reduce the voltage drop to improve the system efficiency.
- The above wire diameters and circuit breakers are theoretically recommended. Please select the appropriate wire diameters and circuit breakers based on actual conditions.

2.3 Installation and Wiring


Warnings:

- There is unsafe voltage in the grid input and PV input. Please disconnect the circuit breaker or air switch before wiring.
- During the wiring process, please make sure the circuit breaker and air switch are disconnected in case of short circuit and the “+” and “-” polarities on each port are correctly connected. The circuit breaker must be installed on the battery port.


Installation and wiring steps are as follows:

Step 1:

Reserve a gap of 500 mm above and below the inverter and a gap of 500 mm on the left and right on an appropriate wall to ensure ventilation and heat dissipation. Unpack and take out the inverter, disassemble the terminal cover by removing the screws, and fix the inverter on the wall with five self-tapping screws. As shown in the figure below, the equipment is fixed using self-tapping screws ST4.2*60 through holes 1, 2 and 3.

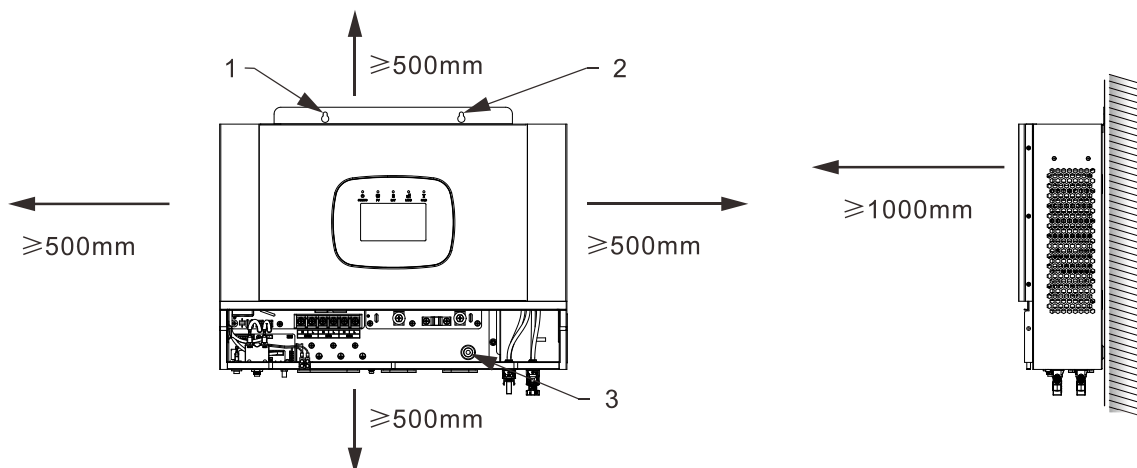

Step 2: Wiring

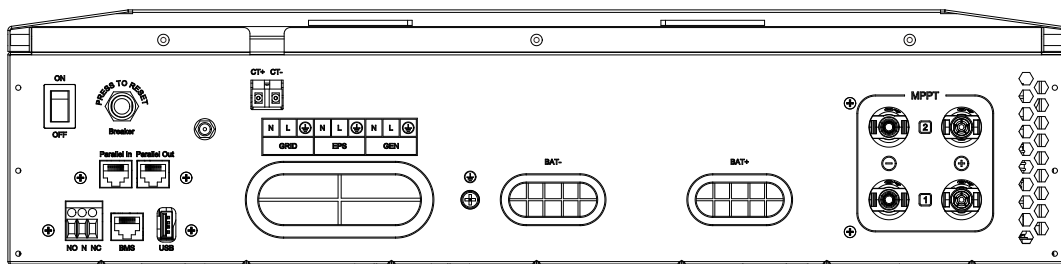


Bottom view

Please follow the steps below to perform the wiring. In order to ensure safe operation and comply with regulations, please install a circuit breaker and disconnect the circuit breaker before wiring.

(1) Connect the battery


Before wiring, disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.” The BAT cables must be connected to the device with an O-type terminal with a recommended internal diameter of 10mm. The O-type terminal must clamp the BAT cables tightly to prevent excessive heat caused by excessive contact impedance;

Insert BAT+/BAT- cables as indicated on the label, and fix them with the M6 screw. The torque is 20 kgf.cm. As shown in the figure below, “BAT+” represents the battery positive electrode, and “BAT-” the battery negative electrode.

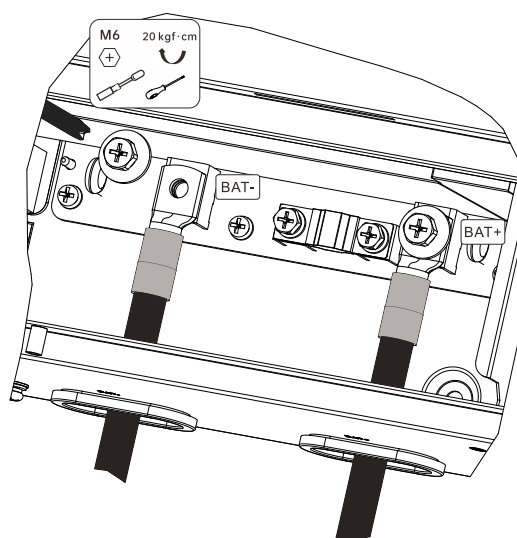

(2) Connect PV cables


Before wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.” Please refer to the figures below for detailed installation methods and cable requirements of the PV ports.

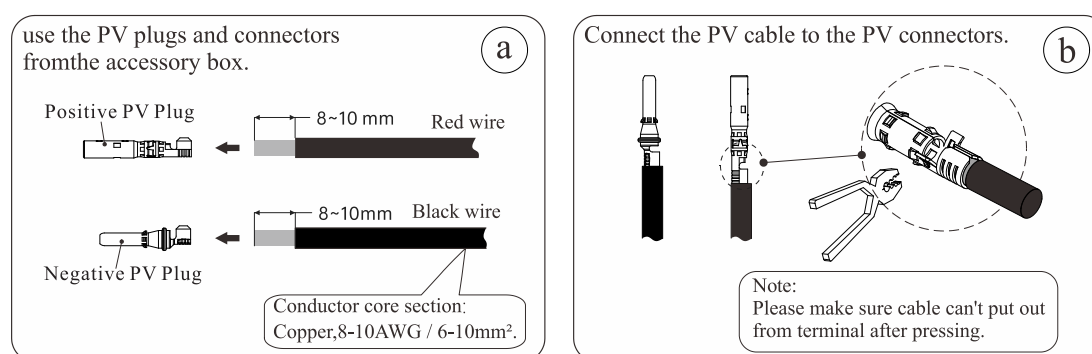

Screw the cap on and plug it into the inverter side.
Make sure the cable polarity is correct.

Note:


1. There will be a clicking sound if the connectors are inserted correctly into the PV ports.
2. Pull the PV cable make sure there is no loosen or shaking.

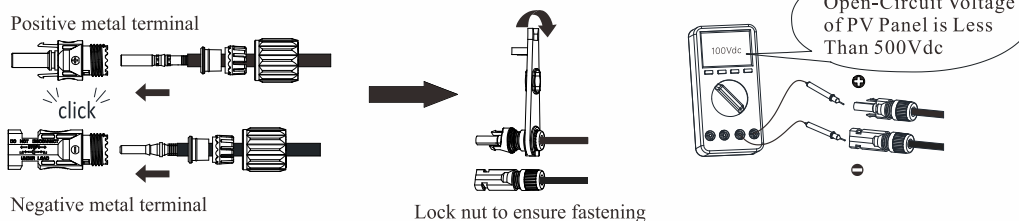

The polarity of the PV strings must not be connected in a reverse manner. Other wise, the inverter could be damaged.

Note:


1. Please make sure the PV input voltage/current not beyond the specification before plug in;
2. When installing the PV terminal, pay attention to the distinction between the positive and negative terminals and the one-to-one correspondence between the terminals and hybrid inverter;
3. When the terminal is docked, there is a click sound. After the terminal is locked, gently pull the PV cable to observe whether looseness.

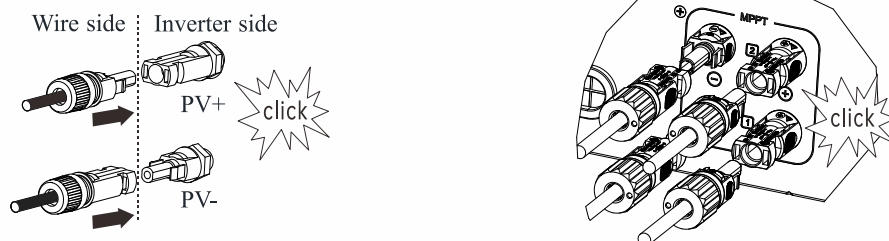

(3) Connect AC input

Before AC input wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”


Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire.

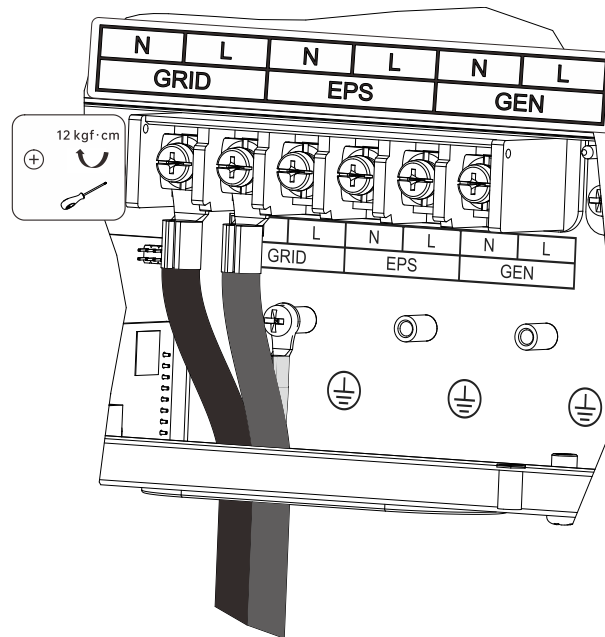

(4) Connect AC output

Before AC output wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”


Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire. Please note that the two outputs share the same earth wire port.

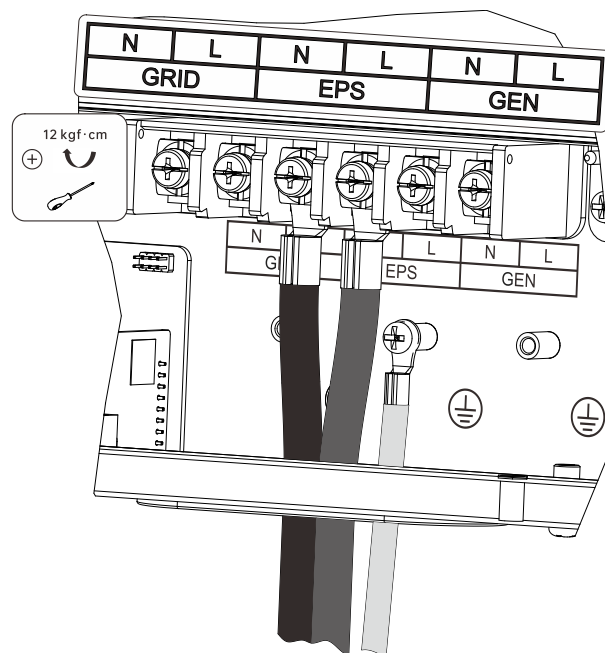

(5) AC input of diesel generator


Before wiring inputs, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”

Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire.

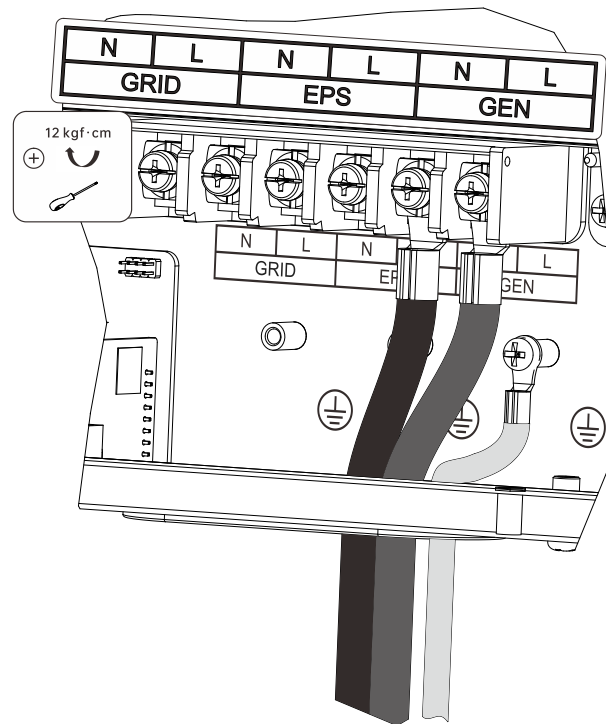


(6) Shell earthing

Please note an additional earthing point on the shell. Clamp the cable with the RNBL5-4 OT terminal and lock it in the position indicated in the figure below. For cable specifications, please refer to the “2.2 Wiring Specifications and Circuit Breaker Selection.” Please ensure that the equipment is properly grounded.

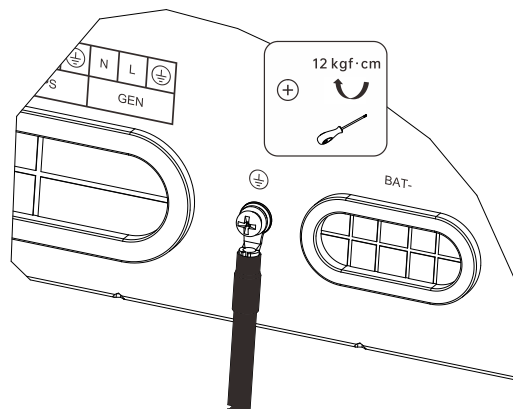

Step 3: Check whether the wiring is correct and firm, especially whether the battery input anode and cathode are correctly connected, whether positive and negative PV inputs are correctly connected, whether the AC input is incorrectly connected to the AC output, and whether the AC input is incorrectly connected to the input port of the diesel generator.

Step 4: Use a Phillips screwdriver to reinstall the terminal cover on the device. The torque is 7 kgf.cm.

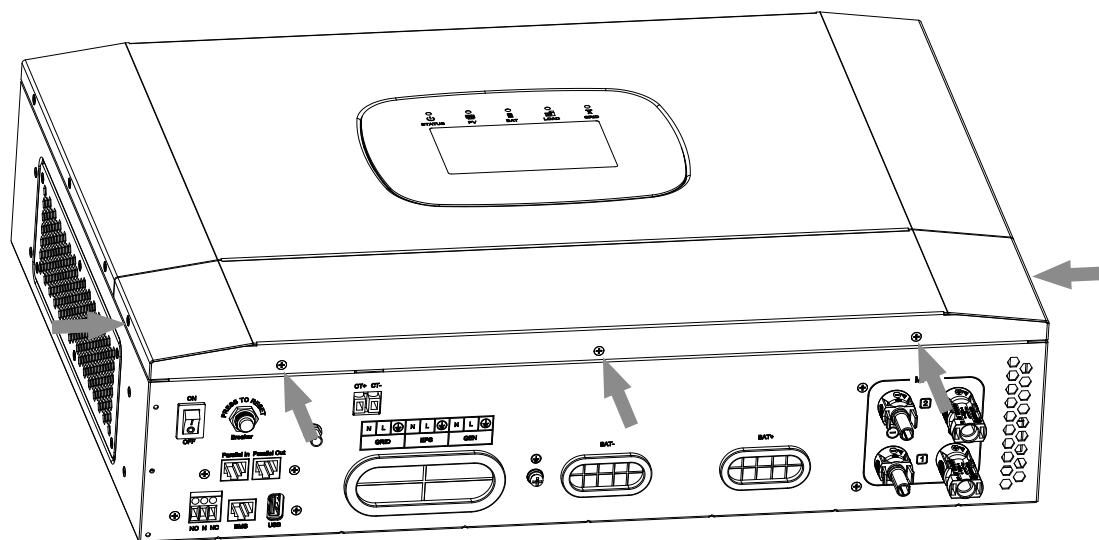

Step 5: Start the inverter

First, close the circuit breaker of the battery, and switch the inverter's rocker switch to the "ON" state. The constantly lit "STATUS" indicator indicates the normal operation of the inverter. Then, close the circuit breaker between the PV array and the grid, and turn on the AC load after the AC output is normal. In this case, the inverter will work normally in accordance with the set mode.

Notes: If energy is supplied to different AC loads, it is recommended to turn on the load with a large impulse current first, and then turn on the load with a small impulse current after the load works stably, in order to avoid the protection action caused by a large transient impulse generated by turning on the load at the same time. If the inverter fails to work normally, and the LCD or indicator displays abnormality, please refer to Section 7 for troubleshooting.

2.4 Parallel Connection and Wiring

2.4.1 Introduction to Parallel Connection

1. The inverter supports up to 9 in parallel connection.
2. It is necessary to ensure that the parallel wiring is correct and firm with a gap of 500 mm between devices reserved in the use of the parallel function.

2.4.2 Guidance and Schematic Diagram of Single-phase Parallel Connection

1. PV wiring:

Each inverter must be connected to a separate PV. PV+ must be connected to PV+, and PV- must be connected to PV-. Before powering on and starting, make sure the wiring is correct and that the lengths and diameters of the wires are the same to avoid abnormal output of the parallel system.

2. AC IN wiring:

L, N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system. Multiple different AC power sources are not allowed to ensure the consistency and uniqueness of the AC source.

3. AC OUT wiring


L, N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

4. BAT wiring

All inverters must be connected to the same battery, BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

5. Parallel communication wiring

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for input and the right network interface for output. The parallel communication cable shall be inserted in place to avoid system abnormality caused by poor communication.

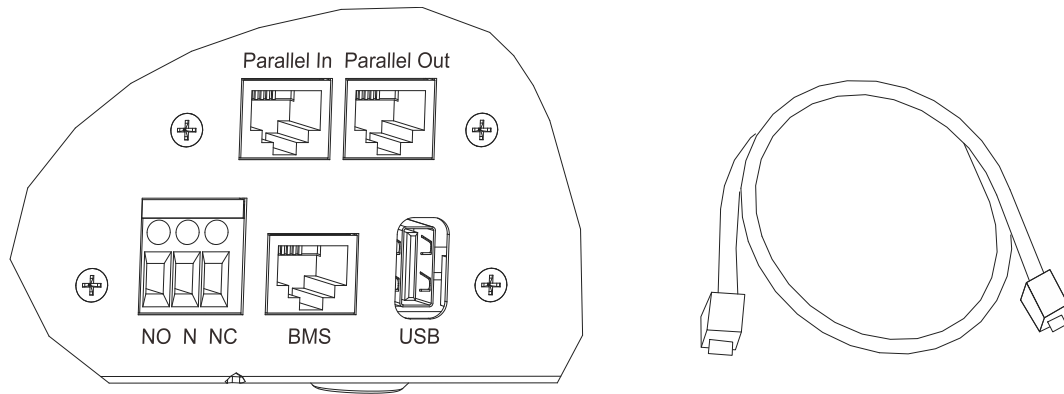


6. Note

Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.


7. Schematic diagram

In case of a single-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) Parallel connection of two inverters:

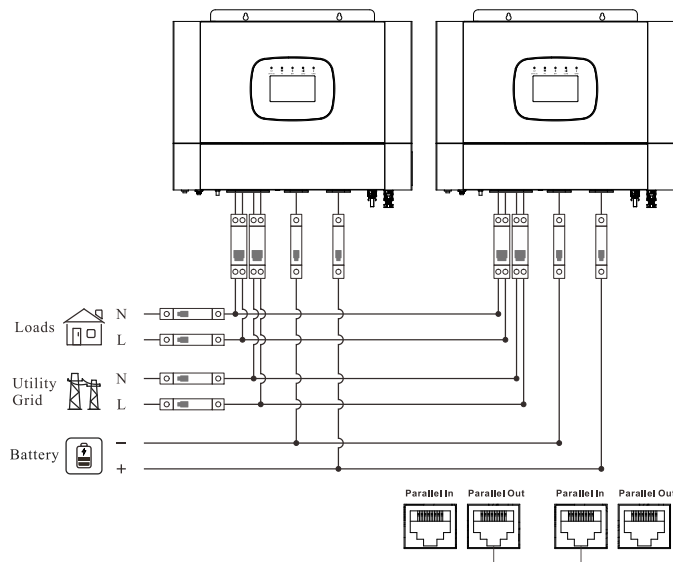


(2) Parallel connection of three inverters:

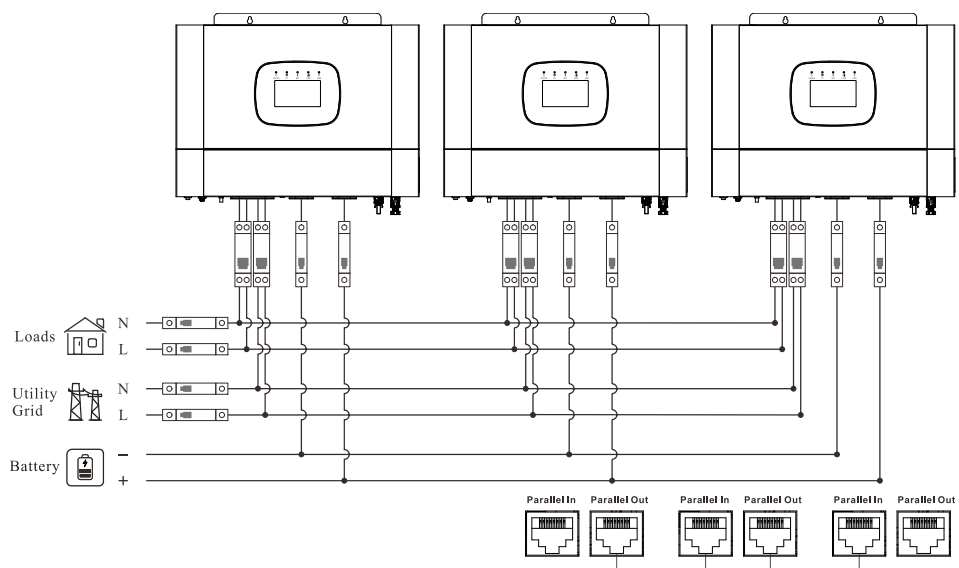

(3) Parallel connection of four inverters:

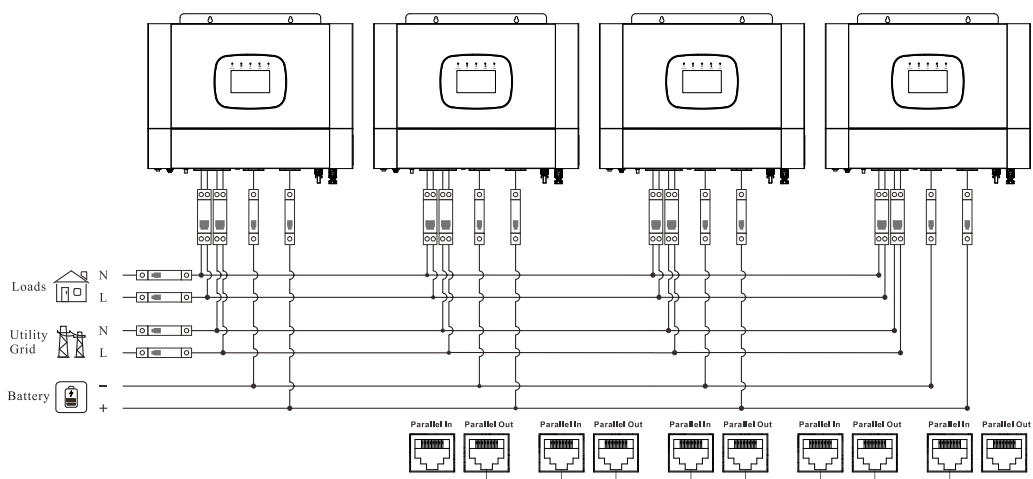


(4) Parallel connection of five inverters:

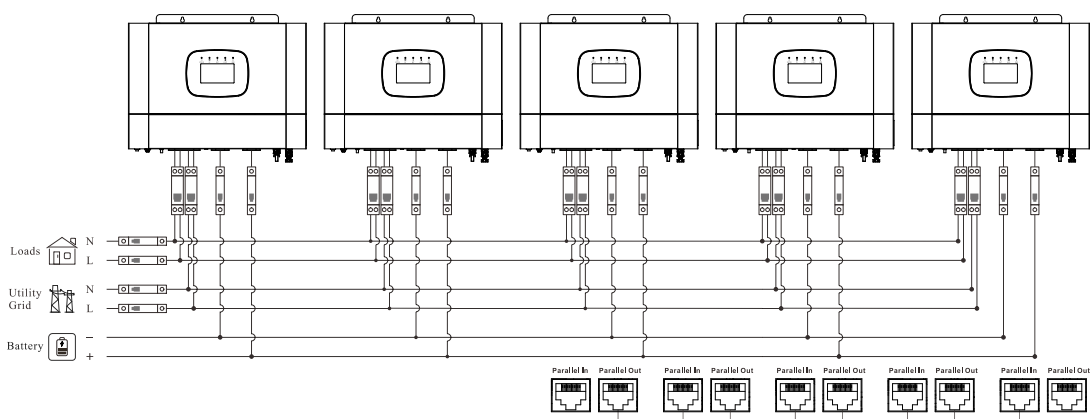

(5) Parallel connection of up to nine inverters, ibid.

2.4.3 Three single-phase parallel parameters setting and display

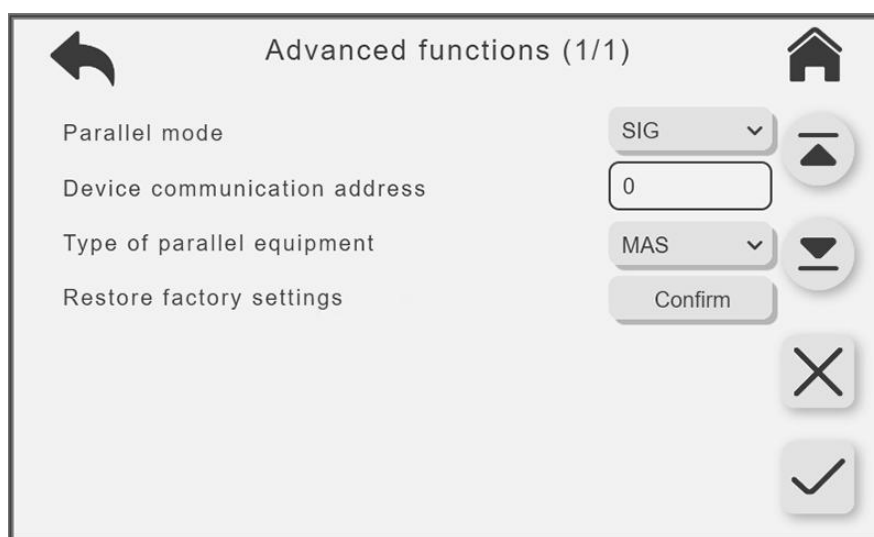

General Settings Interface	
Display Items	Description
Parallel mode	SIG: Settings for the standalone use of the device.(Default) PAL: Settings for the single-phase parallel use of the device. 3P1/3P2/3P3: Settings for the three-phase parallel use. All machine screens connected to P1 should be set to “3P1”; All machine screens connected to P2 should be set to “3P2”; All machine screens connected to P3 should be set to “3P3”; Suppose that when the output voltage is 230V AC (the model supporting parallel connection): In this case, the voltage phases between (P1-P2, P1-P3, P2-P3) are different by 120 degrees, and the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is $230 \times 1.732 = 398\text{V AC}$. Likewise, the wire voltage between L1-L3 and L2-L3 is 398V AC; The voltage between L1-N, L2-N and L3-N is 230V AC.
Device communication address	The parallel mode of the device shall be set with a range of 0~9. 0 (Default).
Type of parallel equipment	MAS: Select the current device as the host. If the parallel mode setting is 3P1, this item will be automatically selected as the host type.(Default) SAL: Select the current device as the slave.
Restore factory settings	After setting this option, you need to enter a password (618) for verification. Once verified, the system settings parameters will be restored to their factory default values. After the restoration is complete, the system will restart.

Description of the turn on or turn off sequence of each switch for single-phase parallel operation

1. First, turn on the circuit breaker on the battery side of each machine, connect the circuit;

2. Turn on the battery button switch;
3. The parallel operation parameters for Machine One are as follows:

Advanced functions (1/1)

Parallel mode	PAL	▼	▲
Device communication address	0		▼
Type of parallel equipment	MAS	▼	▼
Restore factory settings	Confirm		✕
			✓

4. The parallel operation parameters of machine 2 are set as follows:

Advanced functions (1/1)

Parallel mode	PAL	▼	▲
Device communication address	1		▼
Type of parallel equipment	SAL	▼	▼
Restore factory settings	Confirm		✕
			✓

5. Set the parameters of machine 3 as follows:

Advanced functions (1/1)

Parallel mode	PAL	▼	▲
Device communication address	2		▼
Type of parallel equipment	SAL	▼	▼
Restore factory settings	Confirm		✕
			✓

6. After setting OK, turn off the battery button switch of the machine.
7. Turn on the load circuit breaker in sequence, and turn on the grid circuit breaker.
8. Finally, turn on the battery button switch of the machine again.

2.4.4 Guidance and Schematic Diagram of Three-phase Parallel Connection

1. PV wiring:

Each inverter must be connected to a separate PV. PV+ must be connected to PV+, and PV- must be connected to PV-. Before powering on and starting, make sure the wiring is correct and that the lengths and diameters of the wires are the same to avoid abnormal output of the parallel system.

2. AC IN wiring:

N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC input in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

3. AC OUT wiring


N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC output in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

4. BAT wiring

All inverters must be connected to the same battery. BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

5. Parallel communication cable

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for input and the right network interface for output. The parallel communication cable shall be inserted in place to avoid system abnormality caused by poor communication.

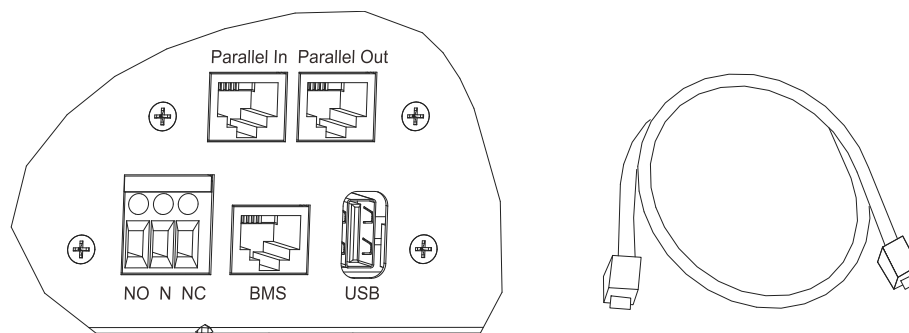

6. Note


Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.

7. Schematic diagram

In case of a three-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) A three-phase system with three inverters

1+1+1 system:

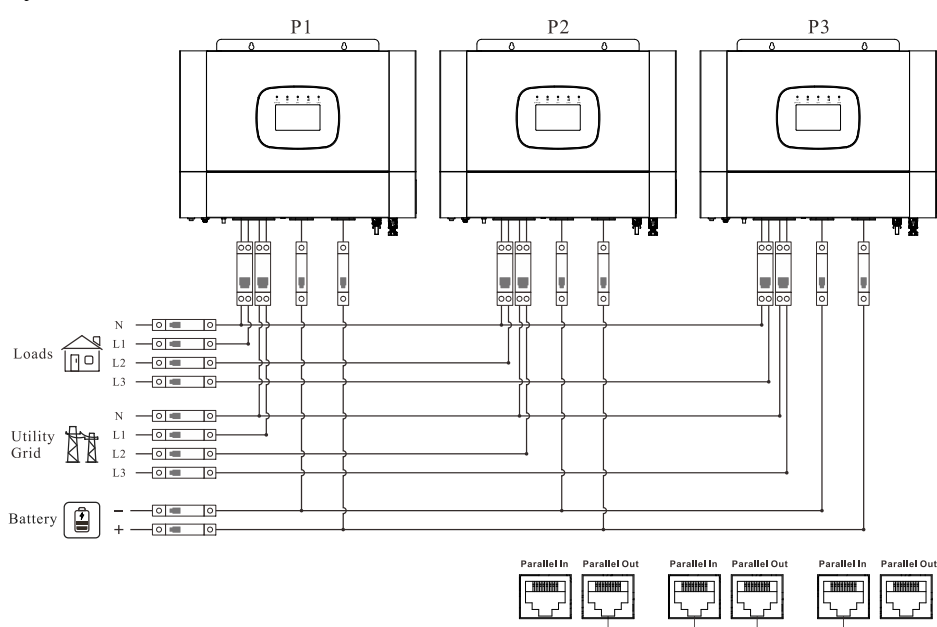

(2) A three-phase system with four inverters

2+1+1 system:

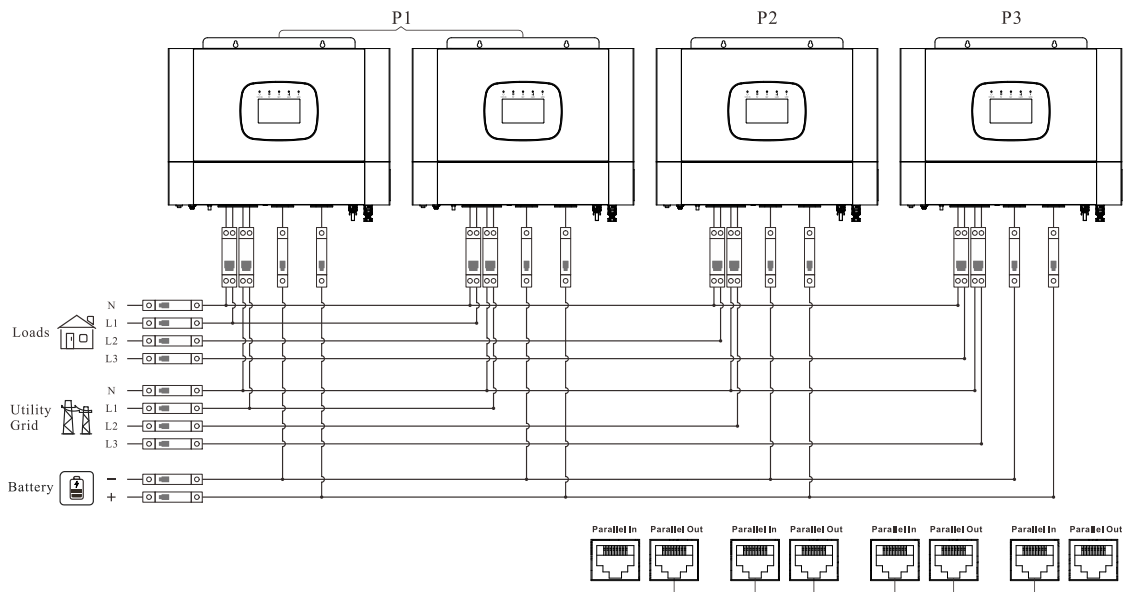

(3) Parallel connection of up to nine inverters, *ibid.*

Notes:

(1) It is necessary to check whether the wiring is correct according to the diagram above to avoid problems in the system before the inverter is powered on with its screen on.

(2) All connections shall be fixed firmly to avoid abnormal system operation caused by disconnected wires.

(3) When the AC output is wired to the load, the wiring shall be correctly connected according to the requirements for electrical equipment to avoid damages.

(4) After the system runs and the measured output voltage is correct, please turn on the load circuit breaker for power supply.

2.4.5 Three-phase system parallel parameter setting and example for three inverters

Description of the turn on or turn off sequence of each switch for three-phase parallel operation

1. First, turn on the circuit breaker on the battery side of each machine, connect the circuit;
2. Turn on the battery button switch;
3. The parallel operation parameters for Machine One are as follows:

Advanced functions (1/1)

Parallel mode: 3P1

Device communication address: 0

Type of parallel equipment: MAS

Restore factory settings: Confirm

4.The parallel operation parameters of machine 2 are set as follows:

Advanced functions (1/1)

Parallel mode: 3P2

Device communication address: 1

Type of parallel equipment: SAL

Restore factory settings: Confirm

5. Set the parameters of machine 3 as follows:

Advanced functions (1/1)

Parallel mode: 3P3

Device communication address: 2

Type of parallel equipment: SAL

Restore factory settings: Confirm

6. After setting OK, turn off the battery button switch of the machine.

7. Turn on the load circuit breaker in sequence, and turn on the grid circuit breaker.
8. Finally, turn on the battery button switch of the machine again.


3. Working Modes

3.1 Power Supply Modes

➤ PV power priority mode:

This mode prioritizes PV power for power supply to the load. When the PV power is unavailable, grid and battery will supply power to maximize the use of solar power generation and maintain the battery power. This working mode is suitable for areas with a relatively stable power grid. The priority of power supply realized at the load side is PV power -> Grid -> battery.

With PV energy input:

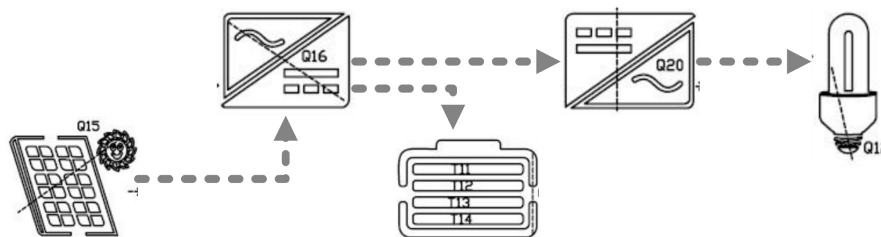

Without PV energy input:




➤ Grid priority mode

This mode prioritizes grid for power supply to the load. Battery inverter power supply will be applied only when the grid is unavailable, and grid charging and power supply will be applied when the grid is available. If there is PV power, PV power will charge the battery first, and the surplus energy and grid will be output to the load in a complementary way, maximizing the use of solar energy, reducing the use of grid, and keeping the battery power. This mode is suitable for areas with an unstable power grid. The priority of power supply realized at the load side is: Grid -> PV power -> battery.

With grid input:



Without grid input:

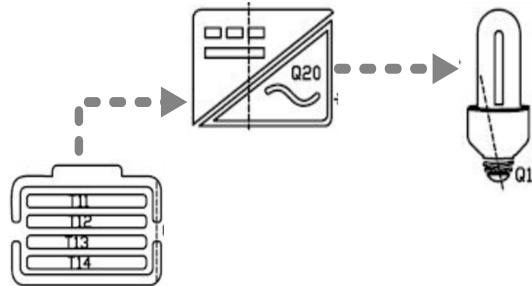


➤ Inverter priority mode:

In this mode, the grid will be applied for power supply only when the battery voltage is lower than the setting point (setting item 04), and the battery discharging mode will be applied when the battery charging voltage is higher than the setting point (setting item 05), so as to repeat the battery charging and discharging cycle. If there is PV power, PV power will maximize the use of solar energy according to PV energy and battery charging and discharging states. This mode is used in areas with a stable power grid. The priority of power supply at the load side is: PV power -> battery -> grid.

When the battery voltage is lower than the set point (04 setting item), switch to grid supply



The battery voltage is higher than the grid-to-battery voltage, switch to battery inverter

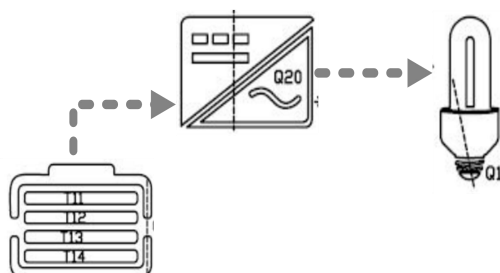


3.2 Charging Modes


➤ PV charging priority:

PV power gives priority to charging the battery, and the grid charging is only started when PV power does not meet the working conditions. This mode can make full use of solar energy to charge in the daytime and switches to grid at nighttime to keep the battery power, which is used in areas with a relatively stable power grid and relatively expensive electricity price.

With PV energy input:

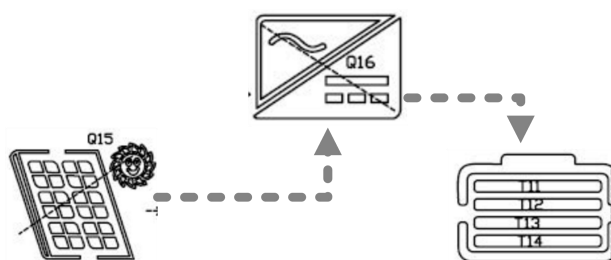


Without PV energy input:

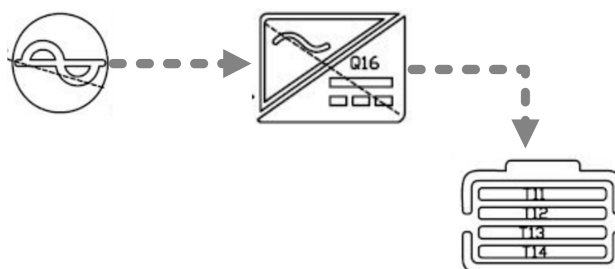


➤ Charging:

As for charging of PV energy and grid, PV energy charging is preferred with grid as a supplement when PV energy is insufficient. This mode mainly meets the requirement for maximum charging power with the fastest charging speed. It is suitable for areas with an unstable power grid, providing sufficient backup power supply.

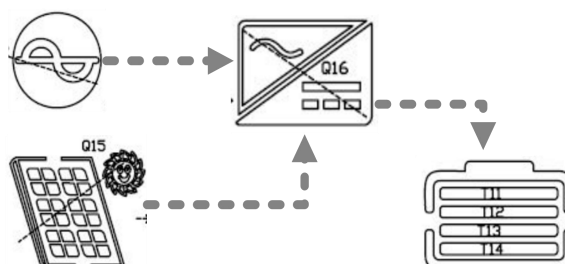


➤ PV charging mode only

Only the PV energy is used to charge the battery without grid. This mode is the most energy-saving one because the battery power comes from PV solar energy, which is usually used in areas with good lighting conditions.

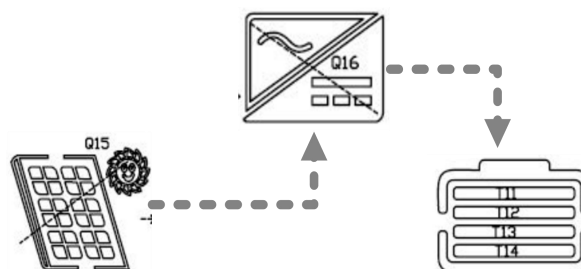

3.3 Battery Charging Parameters

➤ The charging curve of the lead-acid battery is shown in the figure below:

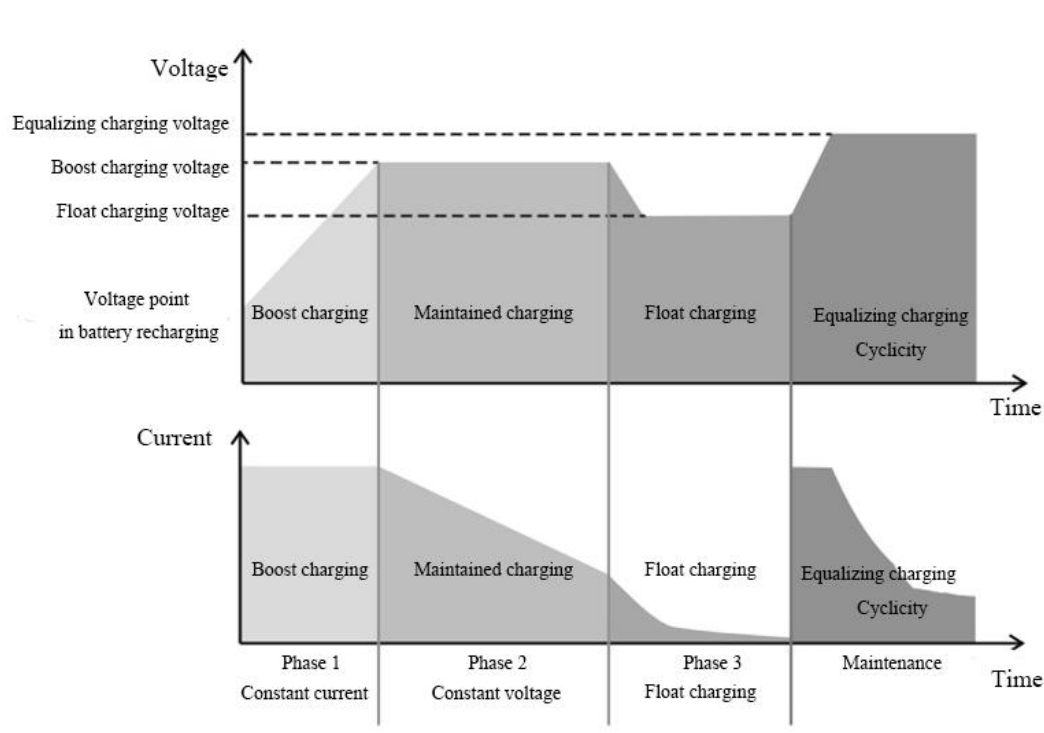


➤ The charging parameters of the lead-acid battery are shown in the table below:

	Gel lead-acid (GEL)	Sealed lead-acid (SLD)	Flooded lead-acid (FLD)	Customized (USER)
Over-voltage disconnect threshold	60V	60V	60V	40~52V (Adjustable)
Recovery voltage in recharging after fully-charged	52V	52V	52V	52V (Adjustable)

Boost charging voltage	56.8V	57.6V	58.4V	40~52V (Adjustable)
Float charging voltage	55.2V	55.2V	55.2V	40~52V (Adjustable)
Equalizing charging voltage	56.8V	58V	59.2V	40~52V (Adjustable)
Under voltage alarm threshold	44V	44V	44V	40~52V (Adjustable)
Under voltage recovery threshold	Under voltage alarm threshold + 8V			
Low-voltage disconnect threshold	42V	42V	42V	40~52V (Adjustable)
Low-voltage recovery	52V	52V	52V	52V (Adjustable)
Discharging limited voltage	40V	40V	40V	40~52V (Adjustable)
Over-discharge (detection) delay time	5s	5s	5s	1~30s (Adjustable)
Equalization duration	-	120 min	120 min	0~600 min (Adjustable)
Equalizing charging interval	-	30 days	30 days	0~250 days (Adjustable)
Boost charging duration	120 min	120 min	120 min	10~600 min (Adjustable) 180min (Default)

➤ The charging curve of the lithium battery is shown in the figure below:

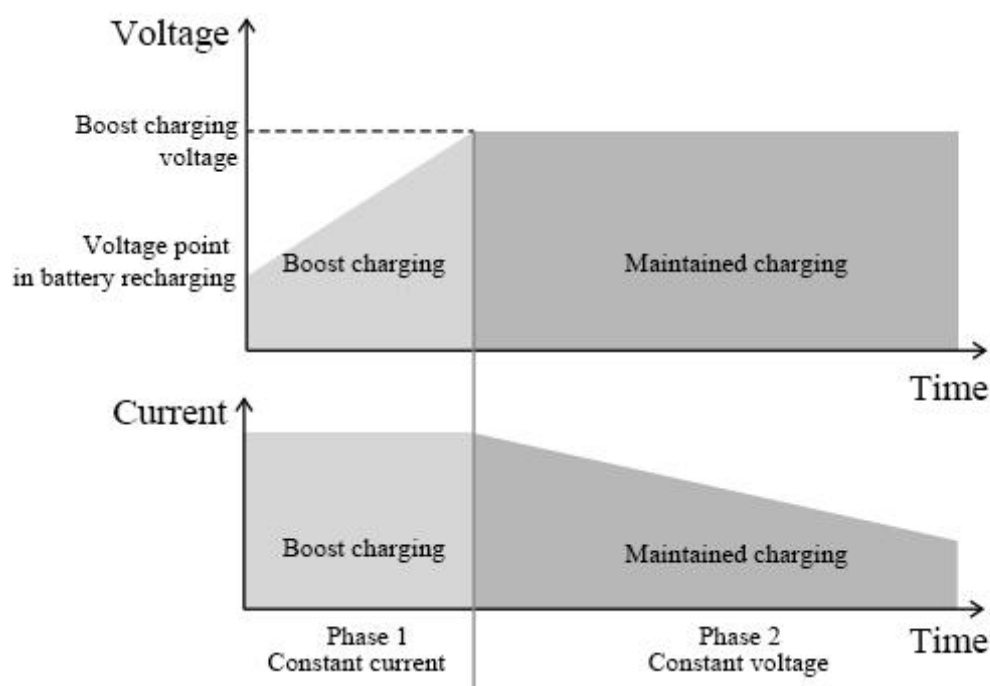


➤ The charging parameters of the lithium battery without BMS communication are shown in the table below:

	LiFePO4 (L14)	LiFePO4 (L15)	LiFePO4 (L16)	Ternary lithium (N13)	Ternary lithium (N14)
Over-voltage disconnect threshold	60V	60V	60V	60V	60V
Recovery voltage in recharging after fully-charged	47.6V	50.4V	53.6V	50.4V	54.8V
Boost charging voltage	49.2V	53.2V	56.8V	53.2V	57.6V
Float charging voltage	49.2V	53.2V	56.8V	53.2V	57.6V
Under voltage alarm threshold	43.2V	46.4V	49.6V	43.6V	46.8V
Under voltage recovery threshold	Under voltage alarm threshold +8V				
Low-voltage disconnect threshold	42V	45.6V	48.8V	38.8V	42V
Low-voltage recovery	46V	49.6V	52.8V	46V	49.6V
Discharging limited voltage	40.8V	43.6V	46.4V	36.4V	39.2V
Over-discharge (detection) delay time	30s	30s	30s	30s	30s
Equalization duration	120 min	120 min	120 min	120 min	120 min

4. Operating Instructions for LCD Screen

4.1 Operation and Display Panel

➤ The operation and display panel include one display screen, five indicators, as shown in the figure below.

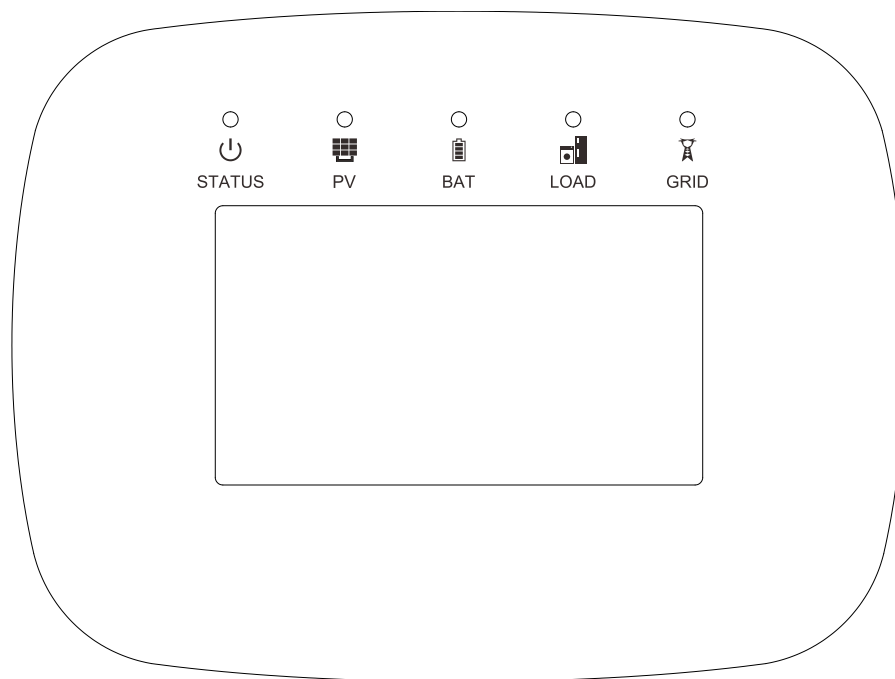

➤ Machine operating status indicator


	No malfunction	malfunction	Alarm	Upgrade
STATUS	green lighting is always on	red lighting is always on	green lighting flashes once every second	green lighting flashes once every 0.5 second

➤ Port status indicator

	Voltage detected at the port	The port has power	Upgrade
PV	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
BAT	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
LOAD	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds

GRID	green lighting flashes once every second	The green LED light is constantly on	The green LED turns on and off every 0.5 seconds
Note:All five LEDs flash green together during updates.			



➤ Introduction to Display Panel

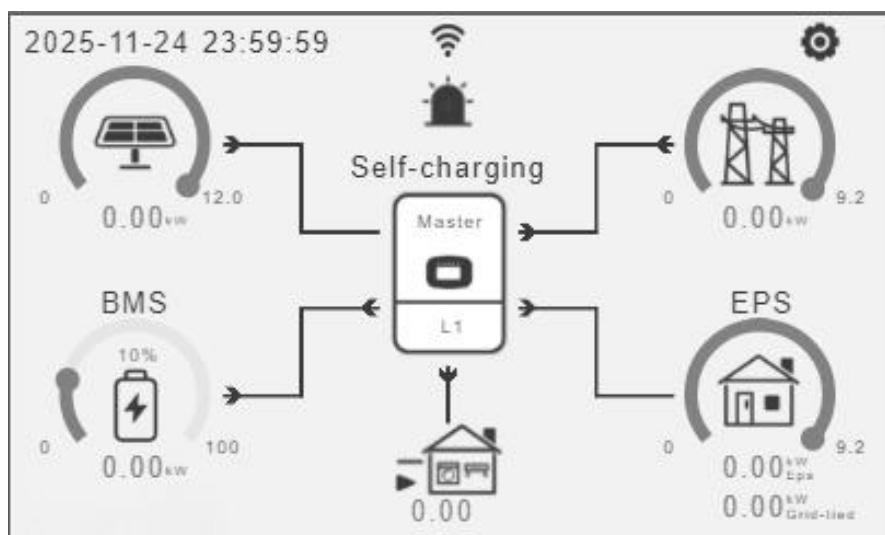

➤ Introduction to the icons on the display panel

Machine Status Interface	
Icon	Description
2024-11-24 23:59:59	System time setting: Click this icon to enter the system time setting Tip: Please input in the format of XX-XX-XX XX:XX:XX,Otherwise there will be an error.
Self-charging	Standby: The machine is in standby mode On-Grid: The machine operates in this mode when connected to the power grid Off-Grid: The machine operates in this mode when disconnected from the power grid Fault: The machine is in fault state. This indicator appears when a malfunction is detected Flash: The machine is in firmware upgrade mode Bypass: The machine is in grid bypass mode. This indicator appears when there is no PV input and the battery cannot discharge Self-Charging: The machine operates in off-grid mode with insufficient PV power to support loads. In this state, PV energy charges the battery exclusively without powering external loads.

	Displays "Connected" when the data logger is successfully linked to the internet.
	Click this icon to access the PV information interface.
	Click/tap this icon to enter the battery monitoring interface.
	This icon appears only when a generator is connected. Click to access generator monitoring.
	Click this icon to access real-time load monitoring.
	Tap this icon to view real-time grid parameters.
	Tap this icon to access comprehensive device status and configuration settings.
	This icon indicates active device faults. Tap to view detailed alarm information.
	This icon indicates that there is an alarm on the device. Click to view detailed alarm information.
	Tap this icon to enter system configuration menu.
	Lithium Battery Communication Successful

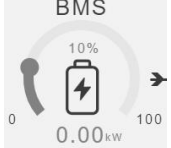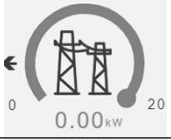	Displays real-time proportion of PV power in total system output.
	Displays real-time State of Charge (SOC) percentage.
	Displays real-time proportion of grid power in total system energy flow.
	Displays real-time power proportion at the Emergency Power Supply port relative to total system output.
Master	The inverter is in single-phase or three-phase parallel operation mode, and if it displays "Master," it is the host unit. If it shows "Slave," then it is the follower unit.
L1	The inverter is operating in three-phase parallel mode, and the connected phase line is L1

2024-11-24 23:59:59

4.2

System Time Setting

Click to enter the device system time setting page, Please input in the format of XX-XX-XX XX:XX:XX, Otherwise there will be an error, as shown in the Figure below

System time setting

×

✓


Date: 2025-09-22
Time: 11:16:20

Tip: Please input in the format of XX-XX-XX XX:XX:XX

4.3 Equipment Information Interface

Click  to enter the device information display page, as shown in the

Figure below

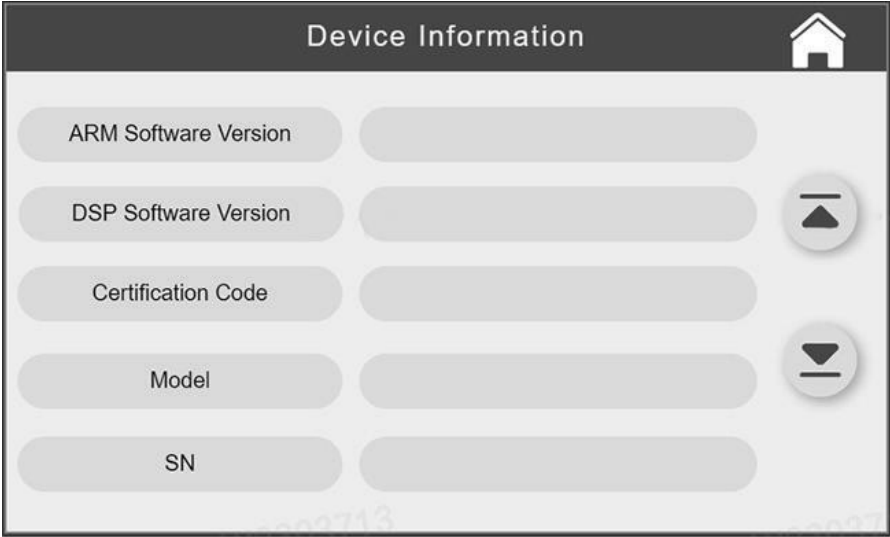

Device Information Interface	
Display Items	Description
ARM Software Version	Communication Software Version
DSP Software Version	Control Software Version
Certification Code	Safety Certification Number
Model	Machine Model Number
SN	Machine Serial Number
	Return to Main Interface
	Page Up/Down

4.4 Fault Alarm Interface


Click  to enter the Fault Alarm Display Page, as shown in the Figure below



Fault Alarm Information Interface	
Display Items	Description
Fault Code	Machine Error Code
Warning Code	Machine Alarm Code
	Click this icon to view detailed device faults or alarms.
	Return to Main Interface
	Page Up/Down

4.5 PV Parameter Display Page Introduction

Click  to enter the PV Parameter Display Page, as shown in the Figure below

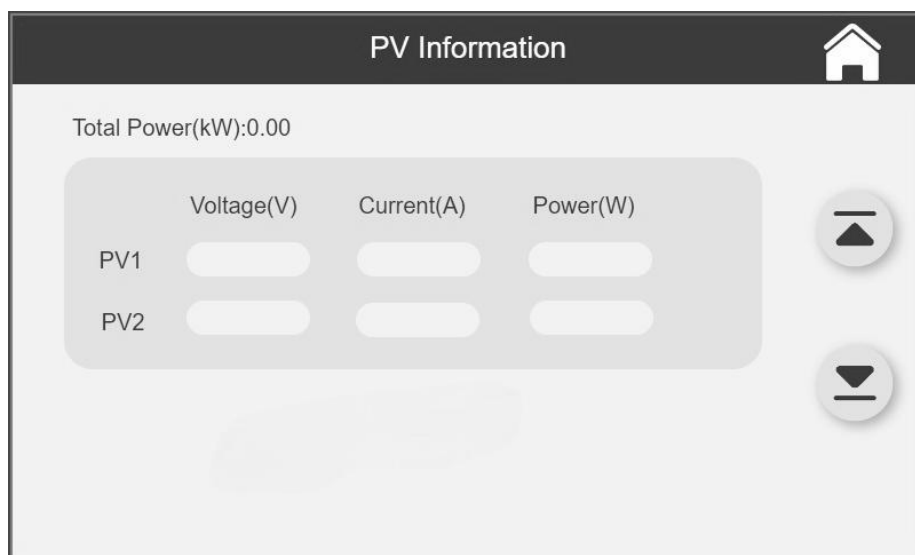


Icon descriptions are as follows:

PV Information Interface	
Display Items	Description
	Return to Main Interface
	Page Up/Down

4.6 Grid Parameter Display Page Introduction


Click  to enter the Grid Parameter Display Page, as shown in the Figure below

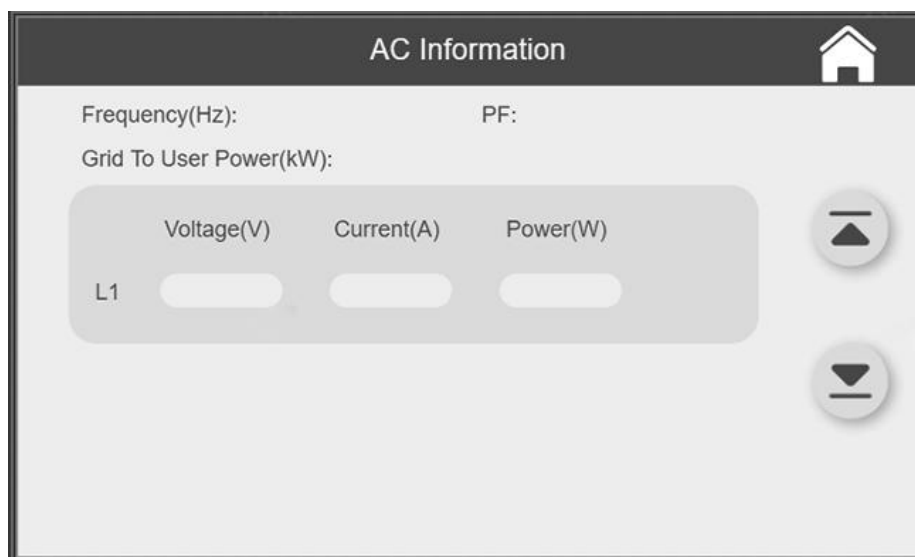

Grid Information Interface	
Display Items	Description
Voltage(V) Current(A)	Voltage and Current Values at the Machine AC Port
Power(W)	Active Power from/to the Grid
Frequency(Hz)	Machine Grid Port Frequency
PF	Power Factor
	Return to Main Interface
	Page Up/Down

4.7 Load Parameter Display Page Introduction


Click  to enter the Load Parameter Display Page, as shown in the Figure below

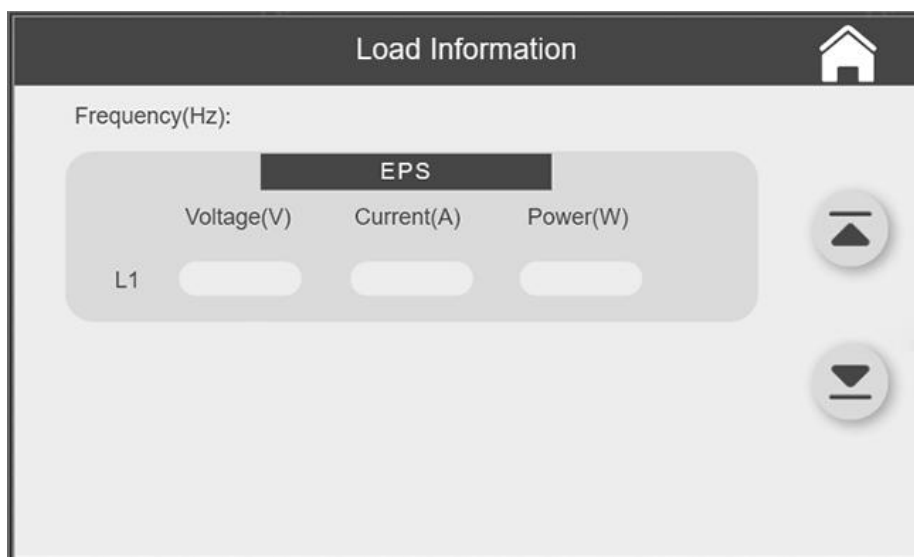

Load Information Interface	
Display Items	Description
Voltage(V) Current(A)	Voltage and Current Values at the Machine Load Port
Power(W)	Active Power Value at the Machine Load Port
Frequency(Hz)	Frequency Value at the Machine Load Port
	Return to Main Interface
	Page Up/Down

4.8 Battery Parameter Display Page Introduction


Click  to enter the Battery Parameter Display Page, as shown in the Figure below

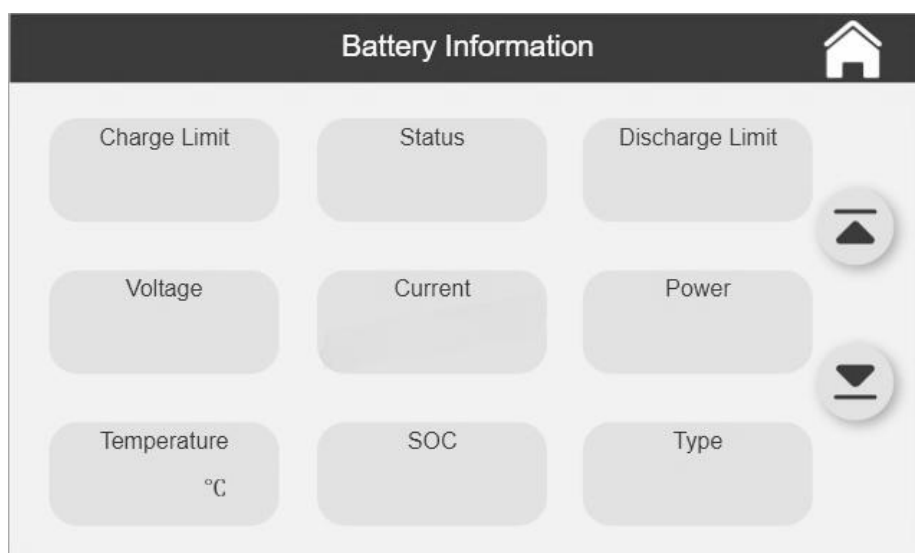

Battery Information Interface	
Display Items	Description
Charge Limit	Max Charging Current of the Battery
Status	Discharge: Battery is in discharging state. Standby: Battery is in standby/idle state. Charge: Battery is in charging state.
Discharge Limit	Max Discharge Current of the Battery
Voltage(V)	Voltage Value at the Machine Battery Port
Current(A)	Current Value at the Machine Battery Port
Power(W)	Power Value at the Machine Battery Port
Temperature(°C)	Battery Temperature
SOC	Battery SOC Value Lead-Acid: Not display SOC
Type	Battery Type: Lead-Acid/Lithium
	Return to Main Interface
	Page Up/Down

4.9 Generator Information Interface


Click  to enter the Generator Information Interface display page, as shown in the Figure below

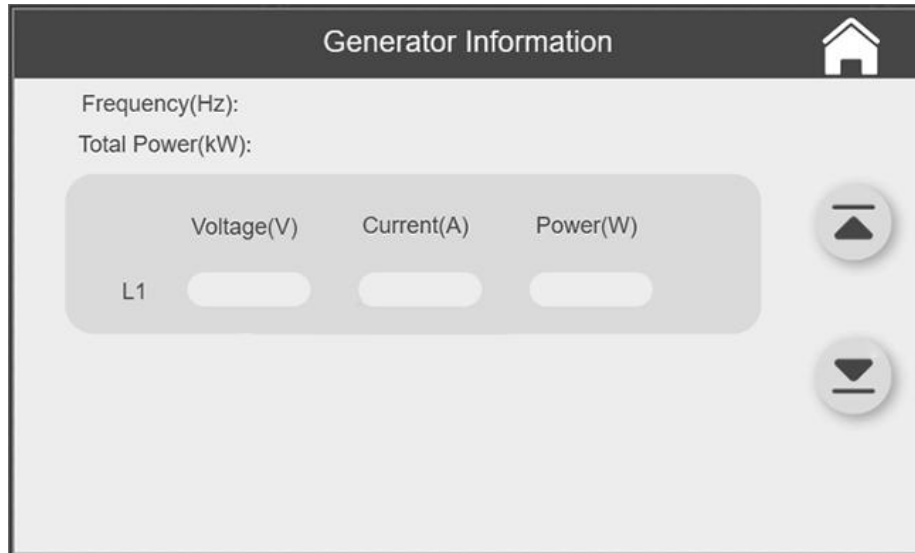


Generator Information Interface	
Display Items	Description
Voltage(V)	Voltage Values at the Machine Generator Port
Current(A)	Current Values at the Machine Generator Port
Power(W)	Active Power Value at the Machine Generator Port
Frequency(Hz)	Frequency at the Machine Generator Port
	Return to Main Interface
	Page Up/Down


4.10 System Parameter Settings Page

Click  to enter the System Parameter Settings Page, as shown in the Figure below

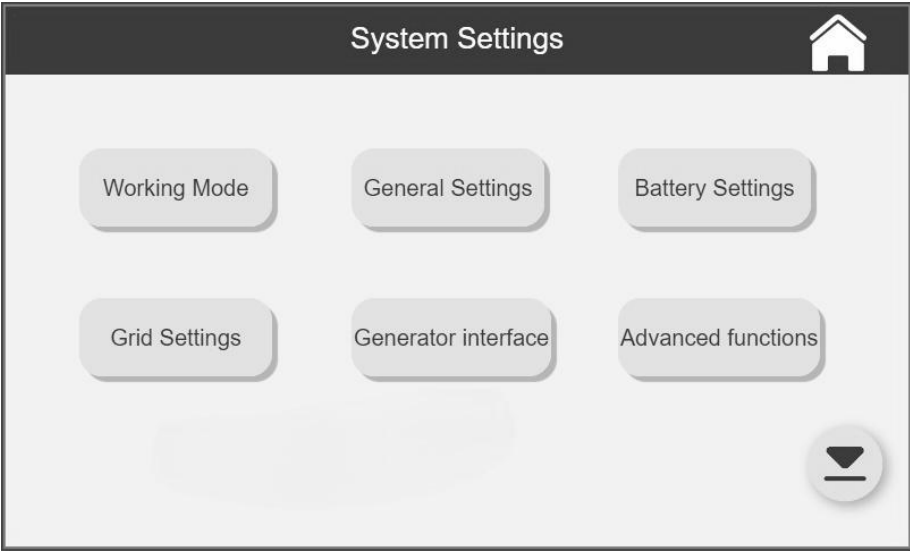

4.10.1 System Operating Mode Settings

Click  to enter the System Operating Mode Settings page, as shown in the Figure below

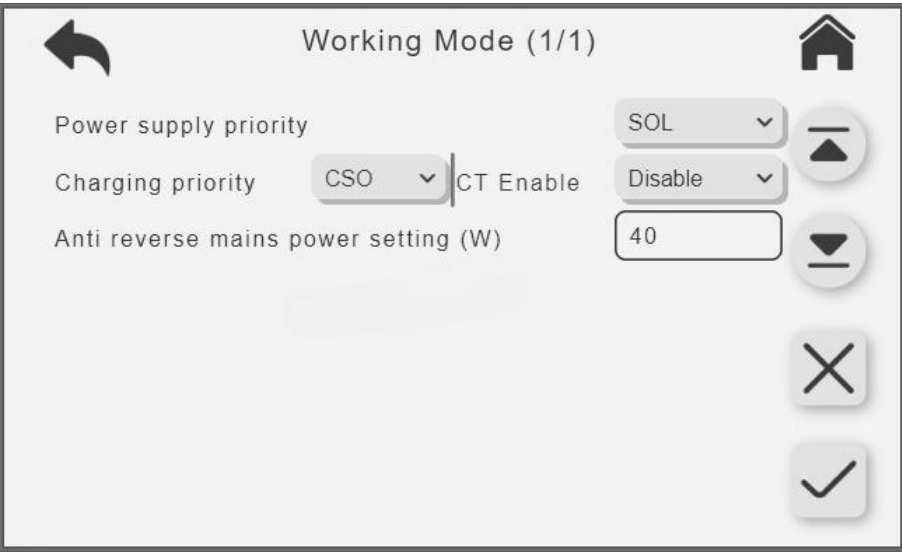


Working Mode Setting Interface	
Display Items	Description
Power supply priority	SOL: It indicates the PV power priority mode. UTI: It indicates the grid priority mode. It switches to the battery inverter power supply only when there is no grid input.(Default) SBU: It indicates the inverter power priority mode. It switches to the grid power supply only when the battery voltage is lower than

	the Battery-to-grid voltage; it switches to battery discharging and inverter power supply only when the battery is fully charged or higher than the Grid-to-battery voltage.
Charging priority	CSO: PV priority charging: The grid will be applied to charge the battery only when the PV power is unavailable. SNU : Charging of PV and grid power: PV power charging is preferred with grid power as a supplement when PV energy is insufficient. When the PV energy is sufficient, grid stops charging. Note: Only when the grid bypass output is loaded, PV and grid charging can be applied simultaneously. When the inverter is working, the PV power will be applied to charge the battery. OSO: PV charging only, without grid.
CT Enable	Enable:It needs to be connected to an external CT, and the current at the grid end is sampled by the external CT. Disable:Use the built-in sensors of the device to sample the current at the grid end.
Anti reverse mains power setting	Set the input power from the Grid under grid connected conditions, The larger the setting value, the better the anti reverse effect. Range 0-300W.


4.10.2 General Settings

Click  to enter the Basic Settings Page, as shown in the Figure below

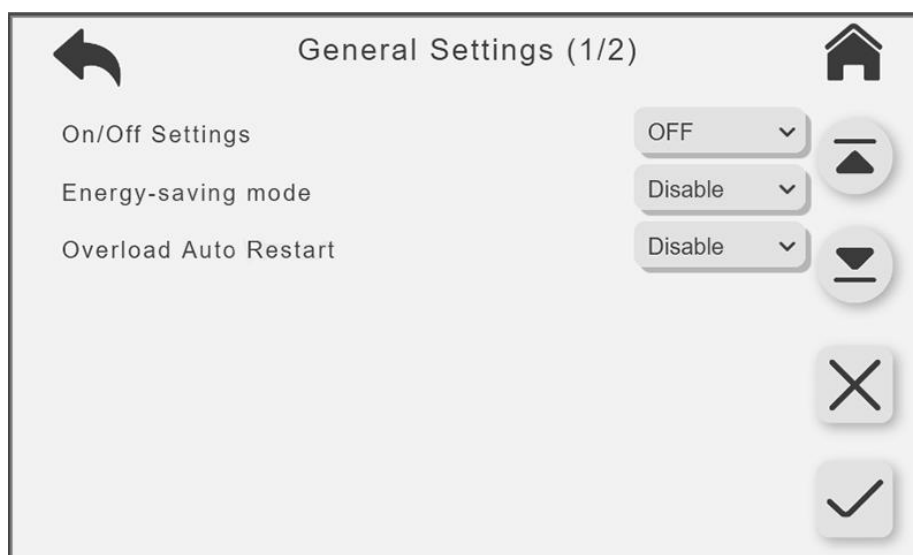

General Settings Interface	
Display Items	Description


On/Off Settings	OFF: Standby mode. ON: Normal operating mode.(Default)
Energy-saving mode	Disable: Energy-saving mode is prohibited.(Default) Enable: After the mode is enabled, if the inverter output load is empty or less than 50W, turn off the output after the inverter output is delayed for a period. When the load is greater than 50W, the inverter starts automatically.
Overload Auto Restart	Disable: When overload auto restart is prohibited, if overload occurs, turn off the output, and the device will never restart. Enable: When overload auto restart is enabled, if overload occurs, turn off the output, and the first restoration takes 30 seconds, the second restoration takes 30 seconds, and the third restoration takes 1 hour.(Default)

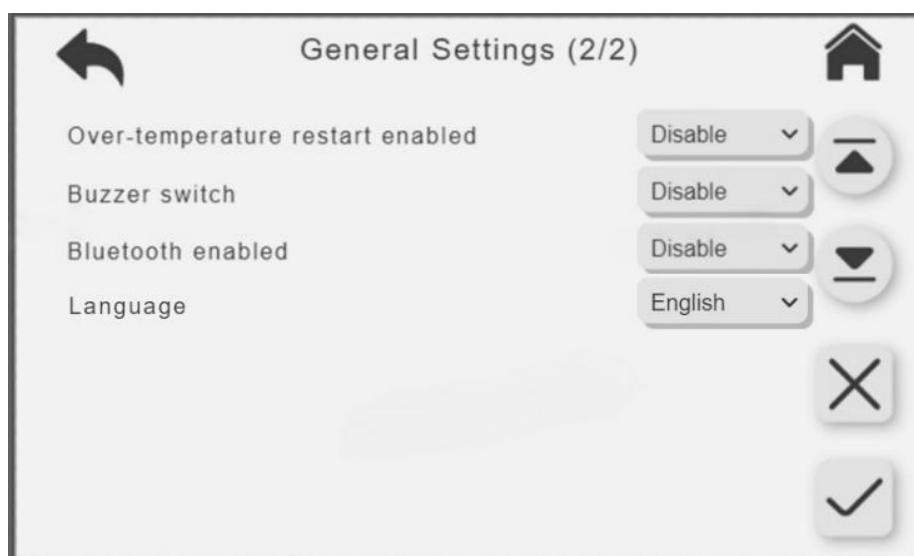


General Settings Interface	
Display Items	Description
Over-temperature restart enabled Cannot be set up(Default)	Disable:When over-temperature auto restart is prohibited, if over-temperature occurs, turn off the output machine and the inverter output will not restart. Enable: When over-temperature auto restart is enabled, if over-temperature occurs, turn off the output, and the AC inverter output will be restarted after the temperature drops. (Default)
Buzzer switch	Disable: The buzzer alarm is prohibited with a muse mode. Enable: The buzzer alarm is enabled.(Default)
Bluetooth enabled	Disable: This function is prohibited. Enable: Turn on Bluetooth.(Default)

Language	Users can set the system language. Turkish English(Default)
----------	---

4.10.3 Battery Parameter Settings

Click  to enter the Battery Parameter Settings, as shown in the Figure below

1. Battery Settings:

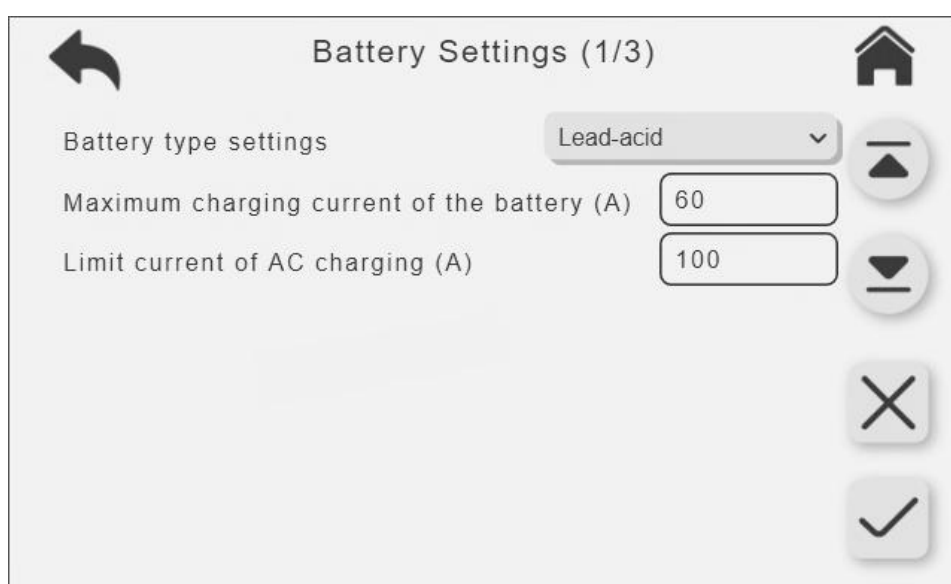

Battery Settings Interface	
Display Items	Description
Battery type settings	Lead-acid: Lead-acid battery. Lithium: Lithium battery.(Default) Lithium No Com: Uncommunicative lithium batteries.
Maximum charging current of the battery	The default maximum charging current of the battery is 60A, with a setting range of 1~130A . 60A (Default).
Limit current of AC charging	The default limited current is 100A for AC battery charging, with a setting range of 1~100A . 100A (Default).

2. Lead-Acid Battery Settings Interface:

Battery Settings (1/3)

Battery type settings

Lead-acid

Maximum charge current (A)

Lead-acid battery subtype

x

✓

Limit current (A)

USE

Tip: Please select the type of lead-acid battery.

⬆

⬇

✕

✓

Battery Settings(Lead-acid) (2/3)

Low Voltage (V)

42.0

Battery charging CV voltage (V)

56.8

Maximum boost charging duration (min)

180

Float charging voltage (V)

55.2

Battery under voltage alarm threshold (V)

44.0

⬆

⬇

✕

✓

Lead-Acid Battery Settings Interface	
Display Items	Description
Lead-acid battery subtype	USE: Customized battery: Users can set all battery parameters.(Default) SLD: Sealed lead-acid battery: with a constant-voltage charging voltage of 57.6V and a float charging voltage of 55.2V. FLD: Flooded lead-acid battery: with a constant-voltage charging voltage of 58.4V and a float charging voltage of 55.2V. GEL: Gel lead-acid battery: with a constant-voltage charging voltage of 56.8V, and a float charging voltage of 55.2V. L14/L15/L16: LiFePO4 batteries L16/L15/L14 correspond to series 16, 15 and 14 of LiFePO4 batteries. The default constant-voltage charging voltage of series 16, 15, and 14 is 56.8V, 53.2V, and 49.2V respectively, which can be adjusted. N13/N14: Adjustable ternary lithium batteries. The default constant-voltage charging voltage of series N13 is 53.2V, and the default constant-voltage charging voltage of series N14 is 57.6V.

	LIT: The setting enables the inverter to be compatible with non-communicating lithium batteries, as the inverter has lithium battery activation function. Under this mode, lithium battery charging and discharging are based on defined parameters. Users need to input charging and discharging parameters corresponding with battery information, otherwise the battery will be damaged.
Low Voltage	The default LV voltage is 42V, with a setting range of 40~52V and a step of 0.4V. When the load is less than 50% of the rated power, if the battery voltage falls below this threshold, the inverter output will shut down immediately. When the load is higher than the rated power, if the battery voltage is 1V lower than the set value, the inverter output will be shut down immediately. It is valid when the battery type is customized battery and lithium battery. 42V (Default).
Battery charging CV voltage	The default CV voltage is 56.8V, with a setting range of 48~59.2V. It is valid when the battery type is customized battery and lithium battery. 56.8V (Default).
Maximum boost charging duration	The default maximum boost charging duration is 180 min, with a setting range of 5~900 min. It refers to the maximum charging time when the voltage during constant-voltage charging reaches the set parameter voltage. USE:180min (Default) SLD/FLD/GEL/L14/L15/L16/N13/N14/LIT:120min (Default).
Float charging voltage	The default float charging voltage is 55.2V, with a setting range of 48~58.4V . 55.2V (Default).
Battery under voltage alarm threshold	The default under voltage alarm threshold of the battery is 44V, with a setting range of 40~50V. When the load is less than 50% of the rated power, if the battery voltage falls below this threshold, an under-voltage alarm will be triggered. When the load exceeds 50% of the rated power, if the low-voltage alarm point is 2V lower than the set value, and the inverter output will not be shut down. 44V (Default).

←
Battery Settings(Lead-acid) (3/3)
🏠

Low-voltage recovery threshold (V)

52.0

⬆️
⬆️

Battery-to-grid voltage (V)

46.0

⬆️
⬆️

Grid-to-battery voltage (V)

54.0

⬆️
⬆️

Battery low-voltage shutdown voltage (V)

40.0

⬆️
⬆️

Battery recharging recovery threshold (V)

52.0

✖️

❌

✅

Lead-Acid Battery Settings Interface	
Display Items	Description
Low-voltage recovery threshold	The default recovery threshold for low-voltage disconnection battery voltage is 52V, with a setting range of 50~58V . When the inverter output is disconnected due to the battery's low voltage, the battery inverter AC output can be recovered when the battery voltage is higher than this set value. 52V (Default).
Battery recharging recovery threshold	The default battery recharging recovery threshold is 52V, with a setting range of 50~56V. After the battery is fully charged, the inverter charging stops, and the battery charging can be recovered when the battery voltage is lower than this voltage value. 52V (Default).
Battery low-voltage shutdown voltage	The default battery low-voltage shutdown voltage is 40V, with a setting range of 40~48V. When the battery voltage is lower than the threshold and the parameter 42 is triggered, the inverter output will be shut down. It is valid when the battery type is customized batteries and lithium batteries. 40V (Default).
Battery-to-grid voltage	The default battery-to-grid supply voltage is 46V, with a setting range of 44V~52V. When Power supply priority is SBU, the battery voltage is lower than the set value, and the output is switched from the inverter to the grid supply.This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to On-grid discharge cutoff SOC 46V (Default)

Grid-to-battery voltage	The default grid-to-battery voltage is 54V, with a setting range of 48~58V. When Power supply priority is SBU, the battery voltage is higher than the set value, and the output is switched from the grid to the inverter power supply. This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to On-grid end-of-discharge recovery SOC 54V (Default)
-------------------------	---

3. Lithium Battery Settings Interface:

Battery Settings(Lithium) (2/3)

BMS communication mode: Disable

Battery communication protocol: PYLON

On-grid discharge cutoff SOC (%): 50

On-grid end-of-discharge recovery SOC (%): 90


Off-grid discharge cutoff SOC (%): 20


Lithium Battery Settings Interface	
Display Items	Description
BMS communication mode	CAN: Select CAN as BMS communication.(Default) 485: Select RS485 as BMS communication.
Battery communication protocol	It is necessary to select the appropriate lithium battery manufacturer/brand based on the communication requirements - whether it is CAN or 485. PYLON=PYLONTECH PYLON(Default).
On-grid discharge cutoff SOC	The default On-grid discharge cutoff SOC is 50, with a setting range of 10~ 90. Lithium batteries end discharge to recover SOC under loads of the grid and the battery.Only valid for BMS communication lithium batteries. 50 (Default).
On-grid end-of-discharge recovery SOC	The default On-grid end-of-discharge recovery SOC is 90, with a setting range of 20~100. Lithium batteries end discharge to recover SOC under loads of the grid and the battery.Only valid for BMS communication lithium batteries. 90 (Default).

Off-grid discharge cutoff SOC	The default off-grid discharge cutoff SOC is 20, with a setting range of 5~ 90. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery.Only valid for BMS communication lithium batteries. 20 (Default).
-------------------------------	--

Lithium Battery Settings Interface	
Display Items	Description
Off-grid end-of-discharge recovery SOC	The default off-grid end-of-discharge recovery SOC is 30, with a setting range of 10~ 100. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery.Only valid for BMS communication lithium batteries. 30 (Default).
Charging cut-off SOC	When the lithium battery reaches the set SOC value during charging, it stops charging and is only effective for BMS communication lithium battery. 100(Default).


4.10.4 Grid Parameter Settings

Click  to enter the Grid Parameter Settings, as shown in the Figure below

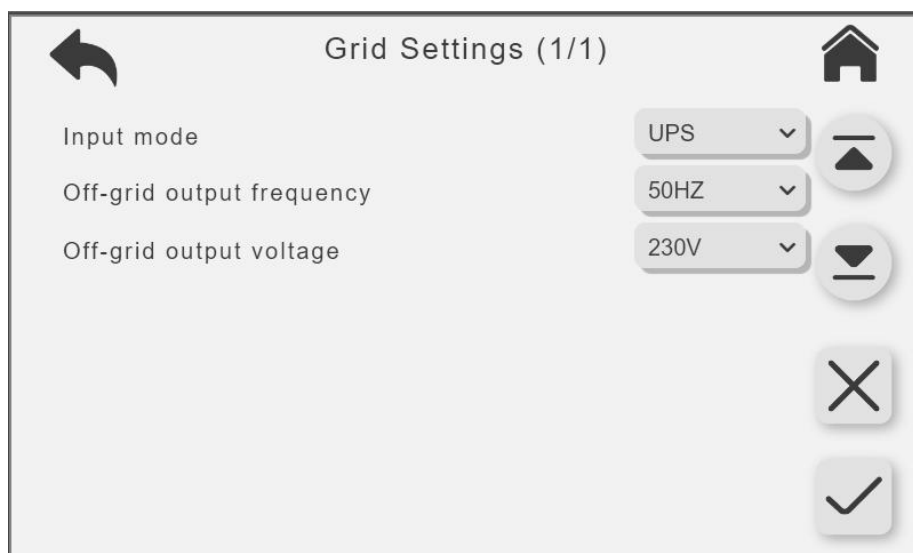

Grid Settings Interface	
Display Items	Description
Input mode	APL: A wide grid input voltage range for 230V device: 90~280VAC, applicable to household appliances. UPS: A narrow grid input voltage range for 230V device: 170~265VAC, applicable to computers, etc.(Default)
Off-grid output frequency	50HZ (Default) /60HZ: Bypass adaptive function: when there is grid, it automatically adapts to the frequency of the first grid-on; When there is no grid, the output frequency can be set on the menu, and the default output of 230V AC inverter is 50 Hz.
Off-grid output voltage	The default off-grid output voltage is 230V, with an optional setting of 200/208/220/230/240V. 230V (Default).

4.10.5 Generator Port Function Settings

Click  to enter the Generator Port Function Settings page, as shown in the Figure below

←
Generator interface
🏠

Generator auto input enabled

Generator input rated power (kW)

Smart Load disconnection BAT SOC(%)

Smart Load period settings

Disbale ▾

6.2

50

Set Time

⬆

⬇

✕

✓

←
Generator interface
🏠

Generator auto input enabled

Generator input rated power (kW)

Smart Load disconnection bat volt (V)

Smart Load period settings

Disbale ▾

6.2

46

Set Time

⬆

⬇

✕


✓

Generator Settings Interface	
Display Items	Description
Generator auto input enabled	After this function is enabled, when the grid fails and the battery voltage reaches the low-voltage disconnection threshold, the dry contact starts the generator to supply power to loads and charge batteries. When the grid recovers, the power supply will be switched from the generator to the grid. This function is prohibited.(Default)
Generator input rated power	Set the maximum input power of the generator set. The default value is 6.2kW, and the range is 1 - 6.2kW with a step of 0.2kW. 6.2(Default)

Non-critical load disconnection BAT SOC (%)	The default non-critical load disconnection battery SOC is 50%, with a setting range of 10~100. 50(Default)
Non-critical load disconnection bat volt	The default non-critical load disconnection battery voltage is 46V, with a setting range of 42~54V. 46V (Default).
Non-critical load period settings	When enabled, you will be redirected to the time setting page. The left side is the on time setting, and the right side is the off time setting. Time period disable(Default)

Time Settings Interface	
Display Items	Description
Time1	The Non-critical load operation can be scheduled within this time period.
Time2	Same as above
Time3	Same as above

4.10.6 Advanced Function Settings

Click  to enter the advanced Function Settings page, as shown in the Figure below

←
Advanced functions (1/1)
🏠

Parallel mode

Device communication address

Type of parallel equipment

Restore factory settings

SIG ▼

0

MAS ▼

Confirm


⬆

⬇

✕

✓

Advanced functions	
Display Items	Description
Parallel mode	SIG: Settings for the standalone use of the device.(Default) PAL: Settings for the single-phase parallel use of the device. 3P1/3P2/3P3: Settings for the three-phase parallel use. All machine screens connected to P1 should be set to “3P1”; All machine screens connected to P2 should be set to “3P2”; All machine screens connected to P3 should be set to “3P3”; Suppose that when the output voltage is 230V AC (the model supporting parallel connection): In this case, the voltage phases between (P1-P2, P1-P3, P2-P3) are different by 120 degrees, and the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is $230 \times 1.732 = 398\text{V AC}$. Likewise, the wire voltage between L1-L3 and L2-L3 is 398V AC; The voltage between L1-N, L2-N and L3-N is 230V AC.
Device communication address	The parallel mode of the device shall be set with a range of 0~9. 0 (Default).
Type of parallel equipment	MAS: Select the current device as the host. If the parallel mode setting is 3P1, this item will be automatically selected as the host type. If the parallel mode setting is 3P2 or 3P3, This item cannot be set as the master unit, it is set as the slave unit by default. MAS(Default). SAL: Select the current device as the slave.
Restore factory settings	After setting this option, you need to enter a password (618) for verification. Once verified, the system settings parameters will be restored to their factory default values. After the restoration is complete, the system will restart.

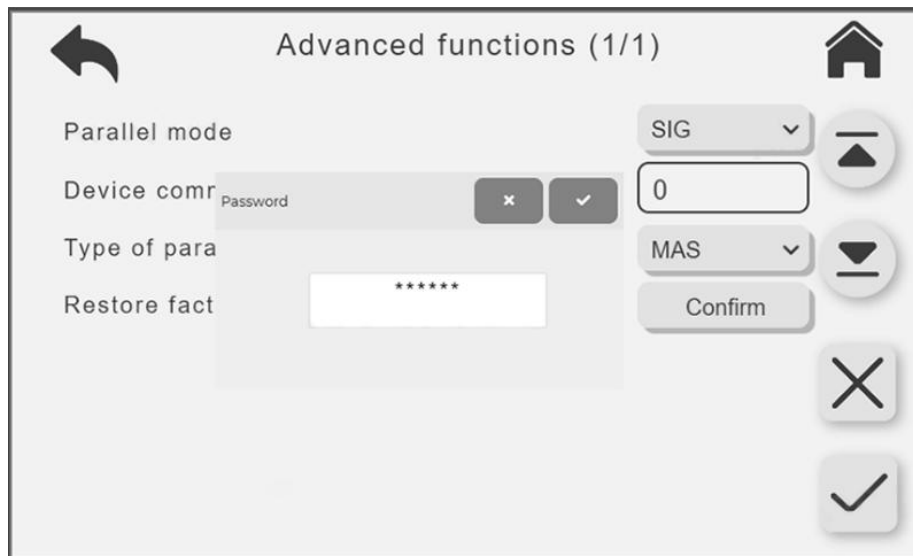

Password Settings Interface
Description
Click on the input box to enter the password. The password is "618". Click on the ✓ to confirm and click on the × to exit.

5. Other Functions

5.1 RS485 Communication Function

This port integrates RS485 and CAN:

- RS485 communicates with lithium battery BMS (customized);
- CAN communicates with lithium battery BMS (customized).

Network port pins are defined as follows:




1	485-B	5	CANL
2	485-A	6	NC
3	GND	7	NC
4	CANH	8	NC


5.2 USB Port Function

The USB port can connect to the USB disk to upgrade the firmware of the machine. The steps are as follows:

- Step 1: Make a burning USB drive
 1. Make sure the USB drive format is FAT32;

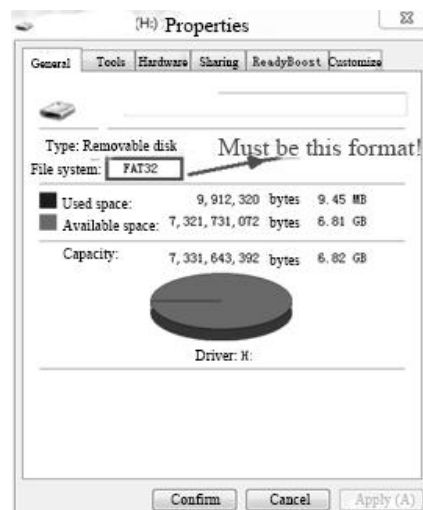

2. All files provided by our company are in the root directory of the USB drive.

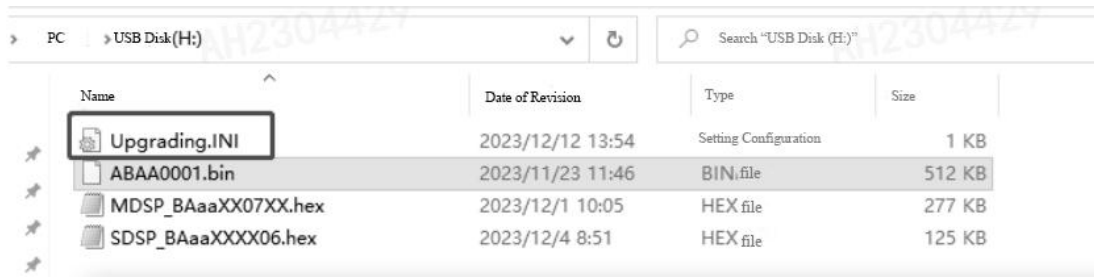

Name	Date of Revision	Type	Size
Upgrading.INI	2023/12/12 13:54	Setting Configuration	1 KB
ABAA0001.bin	2023/11/23 11:46	BIN file	512 KB
MDSP_BAaaXX07XX.hex	2023/12/1 10:05	HEX file	277 KB
SDSP_BAaaXXXX06.hex	2023/12/4 8:51	HEX file	125 KB

3. Check if the ini configuration file name is "Upgrading". If not, you need to update the file name to "Upgrading"




➤ Step 2: Burning

Insert the produced USB drive into the USB port for automatic burning. The red light flashes at an interval of 100ms to check whether burning is underway. HEX burning is about 1 min, and BIN file burning is about 15s. Burning multiple files has an interval of about 5s.

5.3 Dry Contact Function

This dry contact can control the ON/OFF of the diesel generator to charge the battery. ① Normally, the NC-N point is closed and the NO-N point is open; ② When the battery voltage reaches the low-voltage disconnection threshold, the relay coil is energized, and the NO-N point is closed while the NC-N point is open. At this point, the NO-N point can drive resistive loads: 125VAC/1A, 230VAC/1A, and 30VDC/1A. The dry contact interfaces are shown in the figure below.

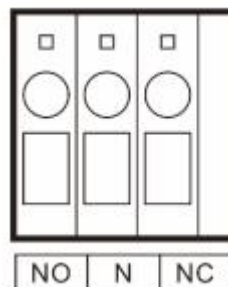

5.4 Wi-Fi Wireless Communication Function

The internal Wi-Fi of the energy storage inverter can be connected to the local router. After the data is uploaded to the server, the user can view the operating parameters and device status anytime and anywhere via the mobile APP while completing some general settings of the inverter with the APP.

6. APP Instructions

1. Please scan the QR code with your mobile phone to download the APP and obtain the instructions.



Android

IOS



HaiPower manual

User manual

7. Protection

7.1 Error Code

Buzzer working logic:

- Alarm: The alarm indicator flashes, and the buzzer beeps once every 1s and lasts for 30s before it stops.
- Fault: The fault indicator code is on, and the buzzer stops after a 10-second beep.

Error type	Error code	Error description
Fault	103	Inverter DC offset is too high
	105	Bypass AC output is overloaded
	200	Off-grid output voltage is too low 0:Off-grid first-stage low voltage 1:Off-grid second-stage low voltage
	201	Off-grid output voltage is too high
	202	Off-grid output has a short circuit
	203	Off-grid output is overloaded 1:First-stage Overpower 2:Second-stage Overpower 3:Third-stage Overpower 4:Fourth-stage Overpower 5:First-stage Overcurrent 6:Second-stage Overcurrent 7:Third-stage Overcurrent 8:Fourth-stage Overcurrent
	204	Abnormal off-grid output DC component offset
	301	Battery open circuit
	305	Battery overvoltage
	306	Battery overcurrent
	307	Battery communication fault
	308	BMS fault
	400	PV overvoltage
	403	PV short circuit
	404	PV reverse connection
	500	Abnormal BUS voltage 0: Bus Over Voltage 1: Bus Under Voltage 2: Off-grid First-stage Bus Under Voltage 3: Off-grid Second-stage Bus Under Voltage
	501	Abnormal BUS voltage sampling 1: Bus Voltage Too Low 2: Bus Voltage Too High
	502	Abnormal communication in the device
	505	Abnormal connection of the temperature sensor
	506	Device over-temperature 0: LLC Over Temperature

		1: Boost Over Temperature 2: Inverter Over Temperature
	507	Abnormal relay 0: Relay Open Circuit 1: Relay Short Circuit
	508	Overcurrent Protection 0: Inverter Software Overcurrent 1: PV Software Overcurrent 3: Inverter Tz Overcurrent 4: PV Tz Overcurrent
	509	Anti-counter-current output timeout
	510	Mismatched software version
	511	Fan fault
Alarm	102	CT Connection Abnormal 0: CT Reverse Connection 1: CT CT Disconnected
	103	Grid unavailable
	104	Overrange voltage of grid 0: First-stage Overvoltage 1: Second-stage Overvoltage 2: Third-stage Overvoltage 3: First-stage Undervoltage 4: Second-stage Undervoltage 5: Third-stage Undervoltage
	105	Overrange frequency of grid 0: First-stage Overfrequency 1: Second-stage Overfrequency 3: First-stage Underfrequency 4: Second-stage Underfrequency
	106	No output voltage from the generator
	107	Overrange output voltage of the generator
	108	Overrange output frequency of the generator
	302	Low battery
	304	Abnormal BMS information
	305	Low battery voltage alarm
	502	Abnormal memory reading and writing

7.2 Troubleshooting (partial)

Fault Code	Fault Description	Troubleshooting
202	Off-grid output short circuit	Check whether the load end wiring is short-circuited. Restart the inverter after clearing the short circuit.
203	Off-grid output overload	Restart the inverter after reducing the electric equipment.

301	Battery open circuit	Check whether the battery circuit breaker is switched on and battery cables are connected.
305	Battery overvoltage	Check whether the battery voltage exceeds the protection value and discharge the battery until it is lower the overvoltage recovery value.
306	Battery overcurrent	Restart the inverter after reducing the electric equipment.
308	BMS fault	Check BMS fault information.
400	PV overvoltage	Use a multimeter to check whether the solar energy input voltage exceeds the maximum PV input voltage of the device.
404	PV reverse connection	Check whether the solar energy input wiring is reversed.
506	Device over-temperature	Check whether the heat dissipation hole of the device is blocked by foreign bodies. The device will return to normal operation after cooling down.
511	Fan fault	Check whether the fan is blocked by foreign bodies.
	No display on the screen	Check whether the device switch is ON and whether the battery and PV circuit breaker are switched on; Press any key on the screen to wake up the screen.

8. System Maintenance

➤ In order to maintain the best performance of the inverter, it is recommended to check the following items three times a year:

① Make sure that the airflow around the inverter is not blocked and remove any dirt or debris from the air intake to ensure the intake air volume.

② Check the wires for electrical leakage caused by poor insulation due to weathering or damage by other objects.

9. Technical Parameters

Technical Data	5kW	6.2kW
Solar Input Data		
Max. PV Input Power	10000W	12000W
Max. Input Voltage	500V	
Start-up Voltage	90V	
MPPT Voltage Range	90V~450V	
Max. Input Current per MPPT	40A	
Max. Short Circuit Current per MPPT	50A	
Number of MPPT	1	
AC Input Data(Grid&Generator)		
Nominal Input Voltage	230Vac, L/N/PE	
Input Voltage Range	90~280Vac	
Max. Input Current	Grid 40A/Generator 40A	
Nominal Input Power	5000W	6200W
AC Frequency Range	50/60Hz(Auto sensing)	
Battery Data		
Battery Type	Li-Ion/Lead-acid	
Nominal Battery Voltage	48V	
Battery Voltage Range	42~60V	
Max. Charge/Discharge Current	110A/120A	130A/140A
Max. Charge Power	5000W	6200W
Li-Ion Battery Activation	Yes	
Li-Ion Battery Communication	CAN/RS485	
Max. Solar Charge Current	110A	130A
Max. AC Charge Current	100A	100A
Max. Charge Current (PV+AC)	110A	130A
Inverter Output Data		

Nominal Output Power	5000W	6200W
Peak Apparent AC Power	10000VA	12000VA
Nominal AC Voltage	230V	
Nominal Grid Frequency	50/60Hz	
Voltage Waveform	Pure Sine wave	
Transfer Time	4ms	
Max. Output Current	21.7A	27A
Overload Protection	60s@102%-110% load; 30s@110%-130% load; 5s@130%-200% load	
THDv (@linear load)	<3%	
Efficiency		
Peak Efficiency	94%	
MPPT Efficiency	≥99.9%	
Protection		
DC Surge Protection	Yes	
AC Surge Protection	Yes	
AC Short circuit Protection	Yes	
System Parameters		
Dimension (W*H*D)	510*360*126mm	
Weight	12.3kg	
Relative Humidity	5%~95% (Non-condensing)	
Operating Temperature Range	-10℃~60℃	
Noise Emission	≤50dB	
Altitude	2000m	
Cooling Method	Fan Cooling	
Ingress Protection	IP54	
Characteristic		
Number of AC Output	2	
Display	LCD&APP	
Communication Interface	RS485/ USB /CAN/ Wi-Fi	
Parallel Capability	9	

Product Qualification Certificate

The manufacture, assembly and performance of the PV inverter all fit company's quality standard. Delivery granted.